
Miele

# Operating and installation instructions

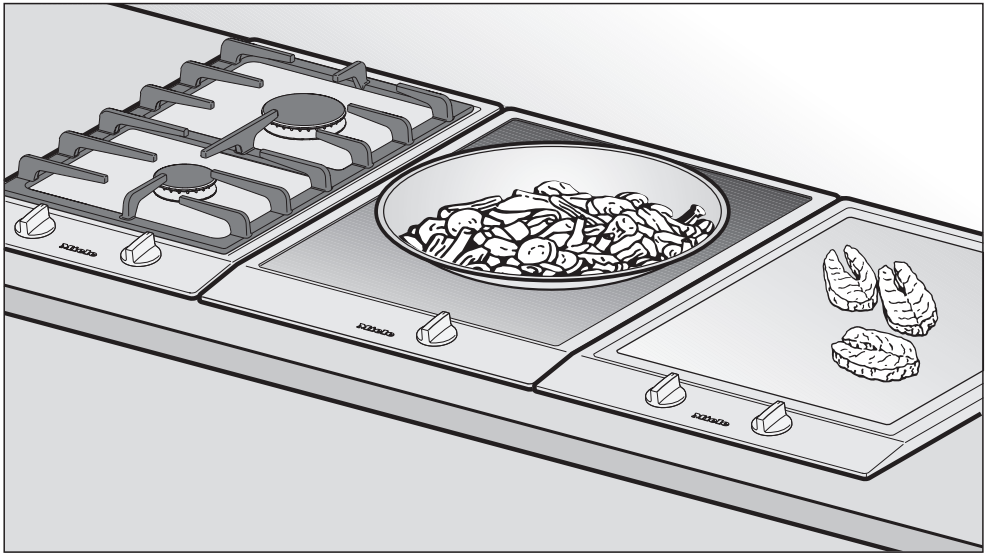

# Stainless steel TepanYaki CS 1326

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 180 440

# Contents

**Guide to the appliance** . . . . . 3
Accessories supplied . . . . . 4

**Warning and Safety instructions** . . . . . 5

**Caring for the environment** . . . . . 10

**Before using for the first time** . . . . . 11

**Operation** . . . . . 12
Switching on and off . . . . . 12
Residual heat indicator . . . . . 12
Settings . . . . . 13
Tips . . . . . 14

**Cleaning and care** . . . . . 15

**Problem solving guide** . . . . . 16

**Optional accessories** . . . . . 17

**Safety instructions for installation** . . . . . 18

**Appliance and building-in dimensions** . . . . . 22

**Preparing the worktop** . . . . . 23

**Installation of several appliances** . . . . . 24


**Fixing the spring clamps and spacer bars** . . . . . 26

**Installing the appliance(s)** . . . . . 28

**General installation tips** . . . . . 29

**Electrical connection** . . . . . 30

**After sales service, data plate** . . . . . 32

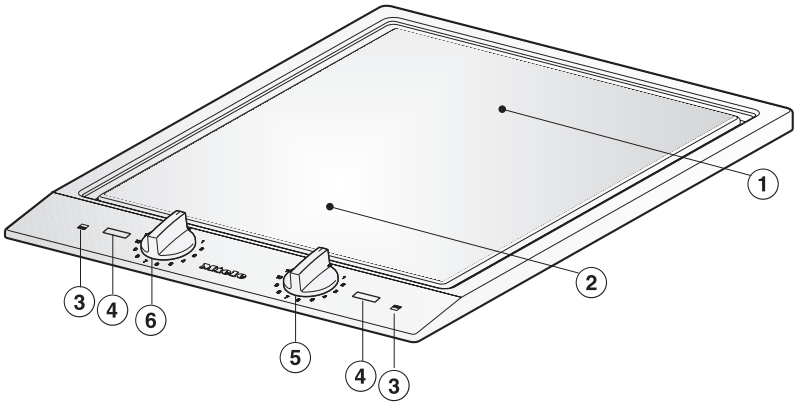


① Rear Tepan plate

② Front Tepan plate


③ Symbols to indicate which part of the Tepan plate the controls are for

④ Indicators

⑤ Control for rear Tepan plate

⑥ Control for front Tepan plate

**Indicators**




⑦ In-operation indicator


⑧ Temperature indicator light

⑨ Residual heat indicator

## Accessories supplied

The accessories supplied with your TepanYaki as well as a range of optional ones are available to order (see "Optional accessories").

**Spatula**

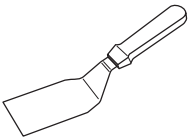

For turning food

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

## Correct application

▶ This appliance is intended for domestic use only and may only be used as described in these instructions. Any other usage is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it correctly by a person responsible for their safety.

## Safety with children

▶ This appliance is not a toy! To avoid the risk of injury, keep children away from it at all times, and do not let them play with it or use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen.

▶ Older children may use the appliance only when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

▶ The appliance gets hot when in use and remains hot for quite a while after being switched off. To safeguard against burning, keep children well away from the appliance at all times.

▶ Do not store anything which might arouse a child's interest in storage areas above or next to the appliance. Otherwise they could be tempted into climbing onto the appliance with the risk of burning themselves. Danger of burning.

▶ Packaging, e.g. cling film, polystyrene and plastic wrappings, must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

## Technical safety

▶ Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ Before installation, check the appliance for visible signs of damage. Under no circumstances should you use it if it has been damaged. A damaged appliance is dangerous.

▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Before connecting the appliance to the mains supply, make sure that the voltage and frequency correspond to the rating on the data plate, otherwise the appliance could be damaged. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ For safety reasons, this appliance may only be used when it has been built in.

▶ This appliance may be connected via a fused plug and switched socket. If you wish to connect it to an isolator switch, or if the appliance is supplied without a plug, it must be installed and connected by a suitably qualified and competent person in strict accordance with current local and national safety regulations. The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from the Miele Service Department.

▶ Never open the casing of the appliance. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:

– the mains fuse is disconnected,

– the screw-out fuse is removed (in countries where this is applicable),

– it is switched off at the wall socket and the plug is withdrawn from the socket, or it is switched off at the isolator.

▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage caused by cockroaches or other vermin will not be covered by the guarantee.

## Correct use

▶ The appliance is hot when in use, and remains hot for quite a while after being switched off. Do not touch it whilst it could still be hot.

▶ For added protection, it is advisable to use heat-resistant pot holders or gloves when using the appliance. Do not let them get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

▶ Do not heat up unopened tins or jars of food on the Tepan plate. as pressure will build up in the tin, causing it to explode. This could result in injury and scalding or damage.

▶ Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire. The life of the appliance could also be reduced.

▶ This appliance must not be set up or operated in the open air.

▶ Never leave the appliance unattended when using it. Overheated oil or fat can catch fire and could even set the cooker hood on fire.

▶ If oil or fat catches fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

▶ Do not use the appliance as a resting place for anything else. The article could melt or catch fire if residual heat is still present or if the appliance is switched on by mistake.

▶ Do not cover the appliance, e.g. with a cloth, kitchen foil, etc. This could be a fire hazard if the appliance is switched on by mistake.

▶ Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

▶ Always ensure that food is sufficiently cooked or reheated. Many factors will affect the overall cooking time, including the size and quantity of the food and its temperature.
Some foods may contain micro-organisms which are only destroyed by thorough cooking at a sufficiently high temperature for long enough. Therefore, when cooking or reheating food such as poultry, it is particularly important that the food is completely cooked through. If in doubt, select a longer cooking or reheating time.

▶ Spray canisters, aerosols and other inflammable substances must not be stored in a drawer under the hob. Cutlery inserts must be heat-resistant.

▶ Do not use plastic utensils on the appliance, as the Tepan plate gets very hot. Even heat-resistant plastic utensils are unsuitable.

▶ When using an electric socket near the appliance, care should be taken that the cable of the electrical appliance does not come into contact with the hot appliance. The insulation on the cable could become damaged, giving rise to an electric shock hazard.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

## Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

## Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

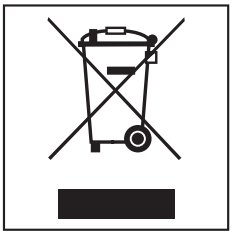

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service" section of this booklet.

## Cleaning for the first time

- Remove any protective foil and sticky labels.
- Clean with a solution of washing up liquid in warm water, and dry with a soft cloth.

Metal components have a protective coating which may give off a slight smell when heated up for the first time.
The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

The Tepan plate is divided into two separate cooking zones which can be switched on and regulated independently of one another. The entire area can be used when cooking large quantities of food. When cooking smaller quantities, the front area can be used for cooking whilst the rear area can be used to keep food warm using a lower power setting.

## Switching on and off

To switch the Tepan plate **on**, turn the control **clockwise**. To switch **off**, turn the control **anti-clockwise**.

Only turn the control clockwise as far as "12" and anti-clockwise back to "0" again to switch it off. Do not attempt to turn it all the way round from the "12" position to "0" or vice versa. This will damage the control.

After switching on, the in-operation indicator ▮ and the temperature indicator 🌡 light up. The temperature indicator light will switch on and off intermittently in conjunction with the heating element.

## Residual heat indicator

After switching off, the residual heat indicator lights up.

The residual heat indicator remains on until the Tepan plate is cool enough to touch.

Do not touch or place any heat sensitive objects on the Tepan plate while the residual heat indicator is still on.
Danger of burning.

## Settings

| Cooking process | Settings |
|---|---|
| Keeping cooked food warm | 1 - 2 |
| Steaming fruit, e.g. apple slices, peach halves, sliced bananas, etc. | 2 - 4 |
| Gentle stir frying of chopped/sliced vegetables, e.g. leeks, mushrooms, green/red peppers, onion etc. | 5 - 7 |
| Gentle frying of breaded or battered fish | 7 - 9 |
| Rapid frying in succession of meat, fish fried eggs, pancakes, hash browns etc. | 9 - 11 |
| Frying potato pancakes, prawns, corn-on-the-cob | 11 - 12 |

These settings are only a guide. The actual cooking time will depend on the type of food, its texture and thickness as well as personal taste.

## Tips

Wipe the surface of the Tepan plate before each use with a damp cloth to remove any dust particles or other soiling which may have settled on it since it was last used.

– Pre-heat the Tepan plate thoroughly for 8 -10 minutes at the power level that you are going to be using for cooking. Pre-heat at power level 12 if you are going to be cooking at settings 9-12.

– It is important to get the Tepan sufficiently hot before use, particularly when browning and sealing meat. If it is not hot enough, the meat will lose too much juice and become tough.

– For frying only use the minimum amount of oil or fat. With marinated food, no fat or oil is needed. Wait until the temperature indicator light has gone out before adding cooking fat.

– Only use fats and oils which can be heated to high temperatures.

– Marinating often improves the flavour of food to be cooked.

– Pat wet food dry with kitchen paper before cooking to prevent it spitting.

– To prevent meat drying out, do not season with salt until after it has been cooked.

Miele offer a range of branded cleaning products. See "Optional accessories".

⚠ Do not use a steam cleaner to clean this appliance.
The steam could reach the electrical components and cause a short circuit.

The appliance should be cleaned after each use. Let it cool down to room temperature.
To avoid water marks and limescale deposits, use a soft cloth to dry surfaces that have been cleaned with water.

**To avoid damaging the surface of your appliance, do not use:**

- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- sharp pointed objects (these can damage the seal between the frame and the worktop).

Use a spatula to remove any large particles immediately.

Allow the appliance to cool down until it can be touched by hand, and then use a solution of hot water and washing-up liquid to soften the soiling. Remove the soiling with a spatula and then wipe the surface with a damp cloth.

Then clean the appliance thoroughly with a few drops of ceramic and stainless steel hob cleaner using a clean, damp cloth. Follow the instructions on the packaging.

Ensure that every trace of cleaner has been removed from the surface by wiping carefully with a damp cloth. Any remaining traces could affect food the next time you use the appliance.

Finally dry the appliance with a clean, soft cloth.

Important - Conditioning agents for stainless steel must not be used on the Tepan plate.

Installation work and repairs to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK). Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

**What to do if...**

**... after switching on, the appliance does not heat up**

Check whether the mains fuse has tripped. If it has, contact a qualified electrician or the Miele Customer Contact Centre.

Miele branded cleaning and conditioning products are available for your appliance.


These can be ordered via the internet at www.miele-shop.com, or from the Miele Customer Contact Centre (see back cover for contact details) or from your Miele dealer.

**Ceramic and stainless steel hob cleaner 250 ml**



Removes heavy soiling, limescale deposits and light discolouration

**E-Cloth (microfibre cloth)**



Removes finger marks and light soiling.

# Safety instructions for installation

Fit the wall units and extractor hood before fitting the TepanYaki to avoid damaging the surface.

▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort.
Any backmoulds must be of heat-resistant material.

▶ This appliance may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment has been carried out by a suitably qualified engineer.

▶ The Tepan Yaki must not be installed directly next to a salamander (CS 1421). It is essential to maintain a distance of at least 150 mm between these two appliances.

▶ Connection should be made via a suitable isolator or a double pole fused spur connection unit which complies with current national and local safety regulations, and the on/off switch should be easily accessible after the appliance has been built in. See "Electrical connection" for more details.

▶ The appliance must not be built in over a fridge, fridge-freezer, freezer, dishwasher, washing machine or tumble dryer.


▶ After installation, ensure that the connection cable cannot come into contact with the underside of the appliance. Make sure that there is no mechanical obstruction, such as a drawer, which could damage it.

▶ Do not use any sealant except where expressly instructed to do so. The seal underneath the appliance provides a sufficient seal for the worktop (see "General installation tips").

▶ Observe carefully the safety distances given on the following pages.

All dimensions in this instruction booklet are given in mm.

**Safety distance above the TepanYaki**

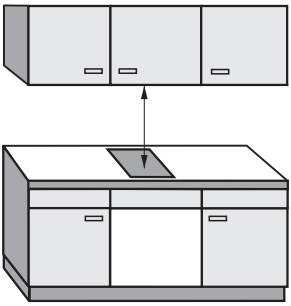

A minimum safety distance must be maintained between the Tepan plate and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details.


If the manufacturer's instructions are not available for the cooker hood, a minimum safety distance of at least 760 mm must be maintained. For any flammable objects, e.g. utensil rails, wall units etc. a minimum distance of at least 760 mm must be maintained between them and the appliance below.

When two or more appliances are installed together below a cooker hood, e.g. a TepanYaki and a gas hob combiset, which have different safety distances given in the installation instructions, you should select the greater distance of the two.

# Safety instructions for installation

**Safety distances to the sides of the TepanYaki**


Ideally the appliance should be installed with plenty of space on either side. There may be a wall at the rear and a wall or a tall unit at one side. On the other side, however, no unit or divider should stand higher than the appliance.

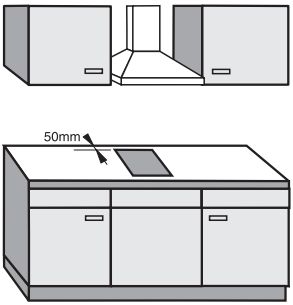


Recommended

Due to the high temperatures radiated by the TepanYaki, it is essential that a minimum distance of **50 mm** is maintained between the worktop cut-out and the back wall.

The minimum distance ① between the worktop cut-out and a wall or tall unit to the right or left of it is:

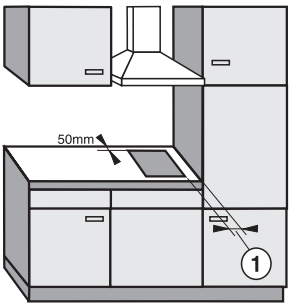


Not recommended

**40 mm** for CS 1212
CS 1221
CS 1234
CS 1223


**50 mm** for CS 1112
CS 1122
CS 1134
CS 1326
CS 1411

**100 mm** for CS 1012
CS 1013

**150 mm** for CS 1421
CS 1312
CS 1322

**200 mm** for CS 1034

**250 mm** for CS 1011
CS 1018
CS 1021

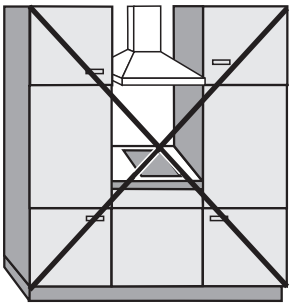


Not allowed

**Safety distance when installing the appliance near a wall with additional niche cladding**

A minimum safety distance must be maintained between the worktop cut-out and any niche cladding to protect it from heat damage.

If the niche cladding is made from a **combustible material** (e. g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the cut-out and the cladding.

If the niche cladding is made from a **non-combustible material** (e. g. metal, natural stone, ceramic tiles) a minimum safety distance ⑤ of 50 mm less the thickness of the cladding must be maintained between the cut-out and the cladding.
Example: 15 mm niche cladding
50 mm - 15 mm = minimum safety distance of 35 mm

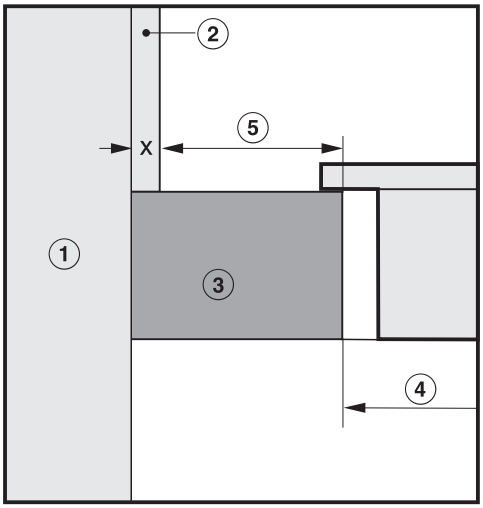


① Masonry

② Niche cladding
Dimension x = thickness of niche cladding material


③ Worktop

④ Worktop cut-out

⑤ Minimum safety distance
for **combustible** materials is 50 mm
for **non-combustible** materials is 50 mm less dimension x

# Appliance and building-in dimensions

## CS 1326

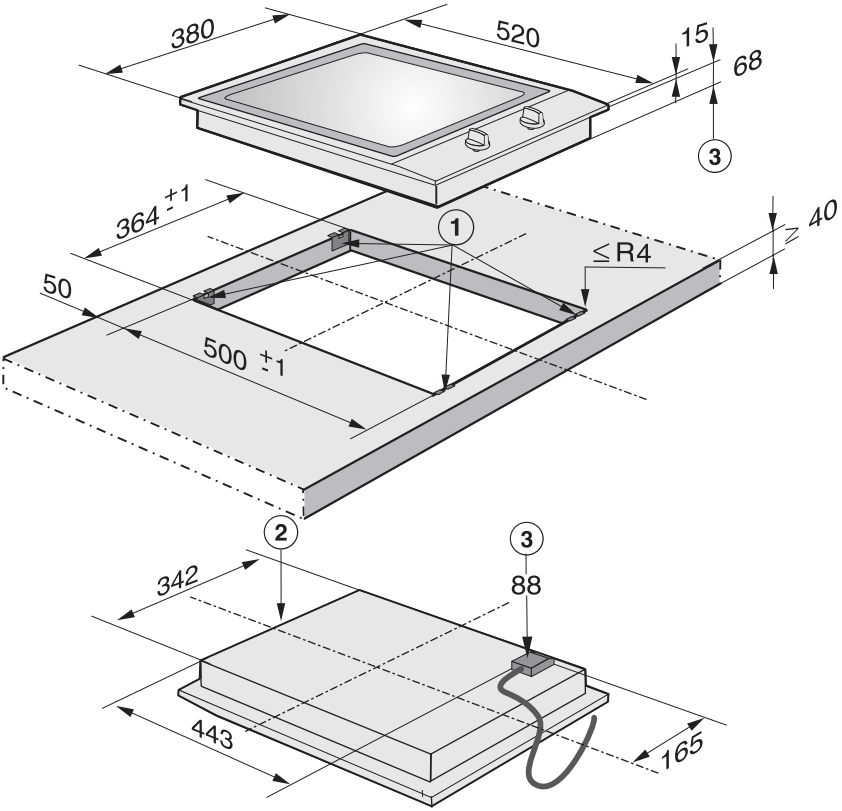


① Spring clamps

② Front

③ Building-in depth for mains connection box with mains connection cable, L = 2000 mm


- Make the worktop cut-out for one or more appliances as applicable. Remember to maintain the **minimum safety distance** from the **back wall**, as well as from any **tall unit or side wall** to the right or left of the TepanYaki.
  See "Safety instructions for installation".
- Seal the cut surfaces with a suitable heat-resistant sealant to avoid swelling caused by moisture.

If, during installation, you find that the seals on the corners of the frame are not flush with the worktop surface, the corner radius (≤ R4) can be carefully scribed to fit.


# Installation of several appliances

When installing two or more appliances next to each other a spacer bar ② must be used between each one.
See "Fixing the spring clamps and spacer bars".

## Worktop cut-out - two appliances

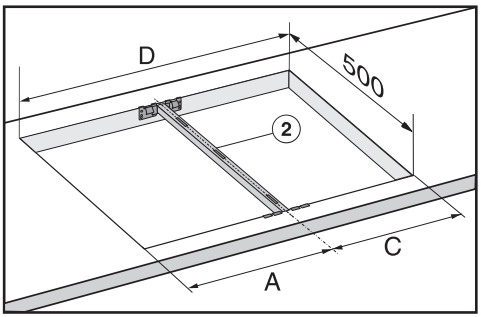



## Worktop cut-out - three appliances

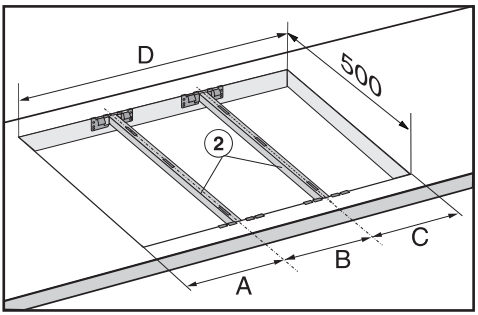


**To calculate the cut-out width (D) required:**

Add up the widths of each appliance (e.g. width A + B + C etc.) and subtract 16 mm from this figure
(i.e. 8 mm is taken off either end of the appliance run).

| Number of appliances | Appliance width in mm | Worktop cut-out in mm |
|---|---|---|
| 1 | 288 | 288 - 16 = **272** |
| 2 | 288, 288 | 288 + 288 - 16 = **560** |
| 2 | 288, 380 | 288 + 380 - 16 = **652** |
| 3 | 288, 288, 288 | 288 + 288 + 288 - 16 = **848** |
| 3 | 288, 288, 380 | 288 + 288 + 380 - 16 = **940** |

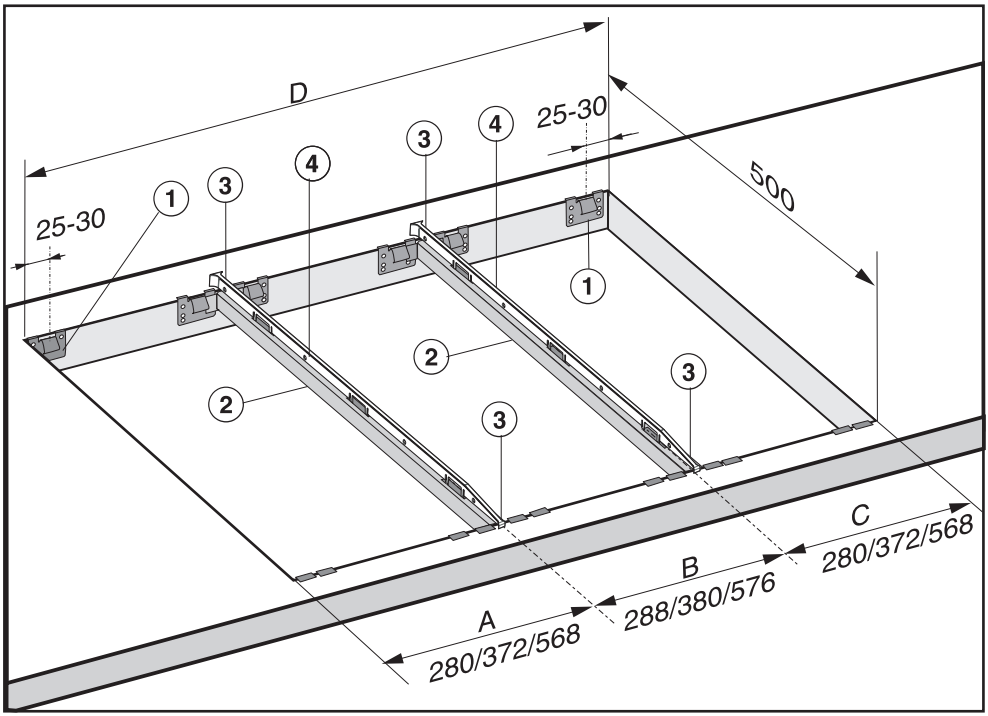


① Spring clamps

② Spacer bars

③ Gap between spacer bar and worktop


④ Sealing strip


The illustration shows a worktop cut-out with spring clamps ① and spacer bars ② for 3 appliances.

An additional spacer bar is required for each additional appliance. The position for securing each additional spacer bar will depend on the width of appliance **B** (288 mm / 380 mm / 576 mm).

# Fixing the spring clamps and spacer bars

**Wooden worktops**

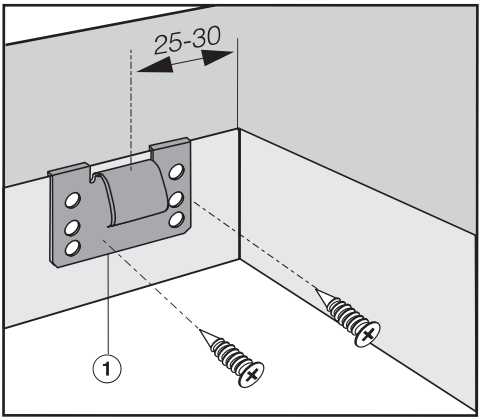


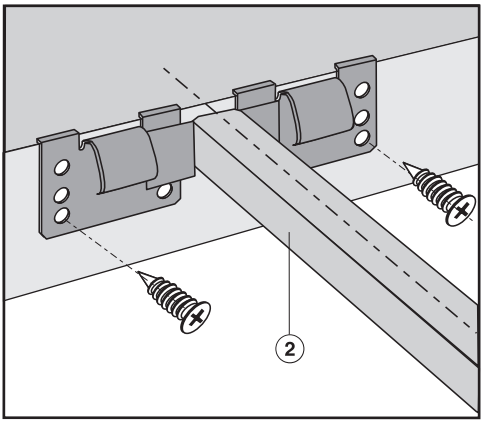




- Position the spring clamps supplied ① and spacer bars ② on the top edge of the cut-out in the positions marked.
- Secure the spring clamps and spacer bars with the 3.5 x 25 mm screws supplied.


**Granite and marble worktops**

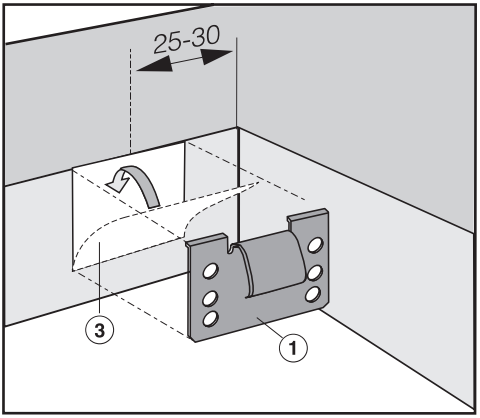The screws are not required for granite or marble worktops.

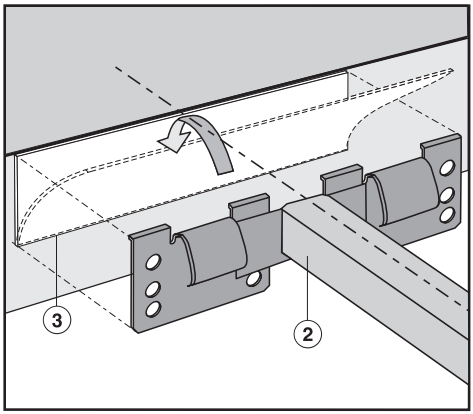



■ Position and secure the spring clamps ① and spacer bars ② using strong, double-sided adhesive tape ③.

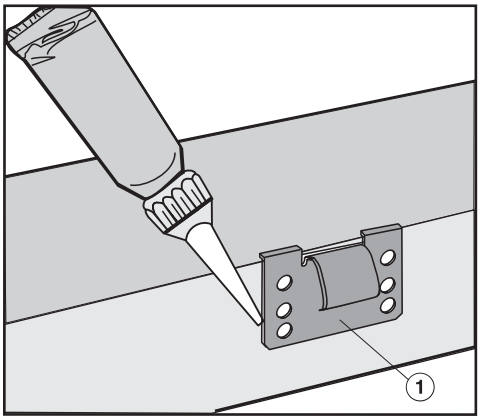


■ Apply silcone to the side edges and the lower edges of the spring clamps ① and spacer bars ②.

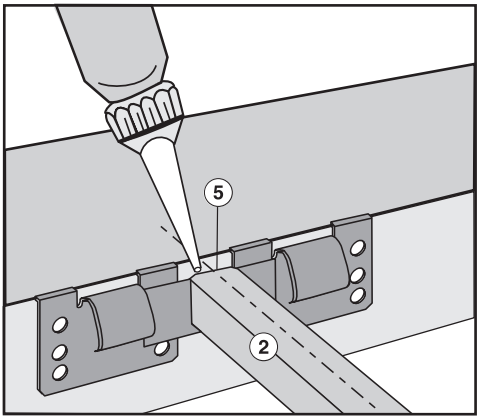



■ Then fill gap ⑤ between the spacer bars and the worktop with silicone from the tube supplied.

- Feed the connection cable down through the cut-out.
- Starting at the front, position the appliance in the worktop cut-out.
- Using both hands, press down evenly on the sides of the appliance until it clicks into position. When doing this make sure that the seal under the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round. **Do not use sealant.**


When installing several appliances, a sealing strip must be fitted into each spacer bar.

- Push the appliance to the side until the long slots in the spacer bar can be seen.

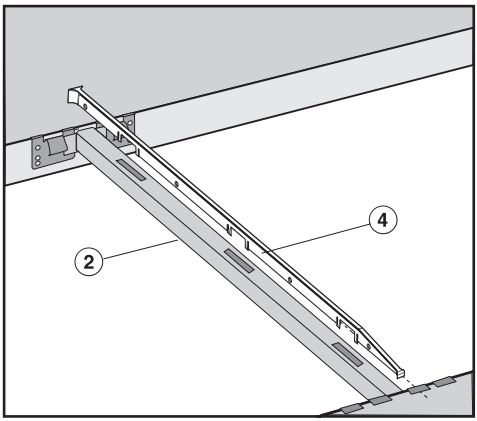


- Fit the sealing strip ④ into the long slots in the spacer bar ②.
- Starting at the front, position the next appliance in the worktop cut-out.
- Connect each appliance to the mains (see "Electrical connection").
- Check that each appliance works correctly.


Once installed, the hob can be removed using a special tool.
It can also be pushed up out of the cut-out from below. It must be pushed up from the back first.

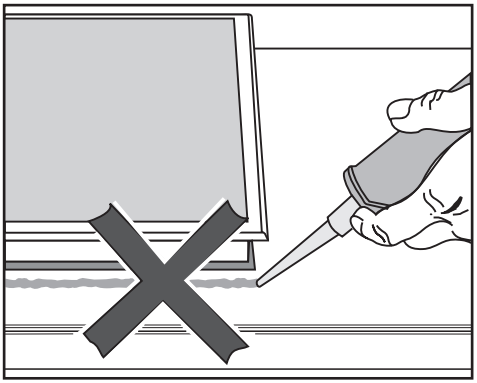

Do not use any sealant unless expressly instructed to do so. The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

Do not use sealant between the frame of the top part of the appliance and the worktop.
This could cause difficulties if the appliance ever needs to be taken out for servicing and possibly result in damage to the frame or the worktop.

**Tiled worktop**

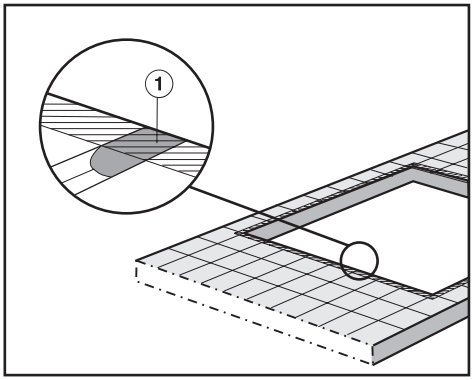


Grout lines ① and the hatched area underneath the appliance must be smooth and even. If they are not, the appliance frame will not sit flush with the worktop and the sealing strip will not provide a good seal between the appliance and the worktop.

# Electrical connection

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK).

If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from Miele.

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

Please make sure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a fused plug and switched socket or a double pole fused spur connection unit, or a suitable isolator (as appropriate) which complies with national and local safety regulations and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a suitable residual current device (RCD).

When switched off there must be an all-pole contact gap of at least 3 mm in the isolator switch (including switch, fuses and relays).

**Important U.K.**

The appliance is supplied for connection to a 230-240 V, 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

| | |
|---|---|
| Green/yellow | = earth |
| Blue | = neutral |
| Brown | = live |

**WARNING**
**THIS APPLIANCE MUST BE EARTHED**

**Important**

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system, which complies with local and national regulations. It is most important that this basic safety requirement is present and tested regularly and if there is any doubt the electrical wiring in the home should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.

# After sales service, data plate

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

– Your Miele dealer, or

– the Miele Customer Contact Centre (see back cover for address).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance which are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.

**United Kingdom**
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: (01235) 554455
Fax: (01235) 554477
Customer Contact Centre Tel: (08707) 554466
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

**Australia**
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

**China**
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

**Hong Kong**
Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Tel: +852- 2610-1331, Fax: +852-2610-1013
E-mail: mielehk@miele.com.hk
Internet: www.miele.hk

**India**
Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

**Ireland**
Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

**New Zealand**
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

**Singapore**
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
# 04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

**South Africa**
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

**United Arab Emirates**
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved/ 2809

M.-Nr. 07 180 440 / 04

CE