
Miele

NOVOTRONIC

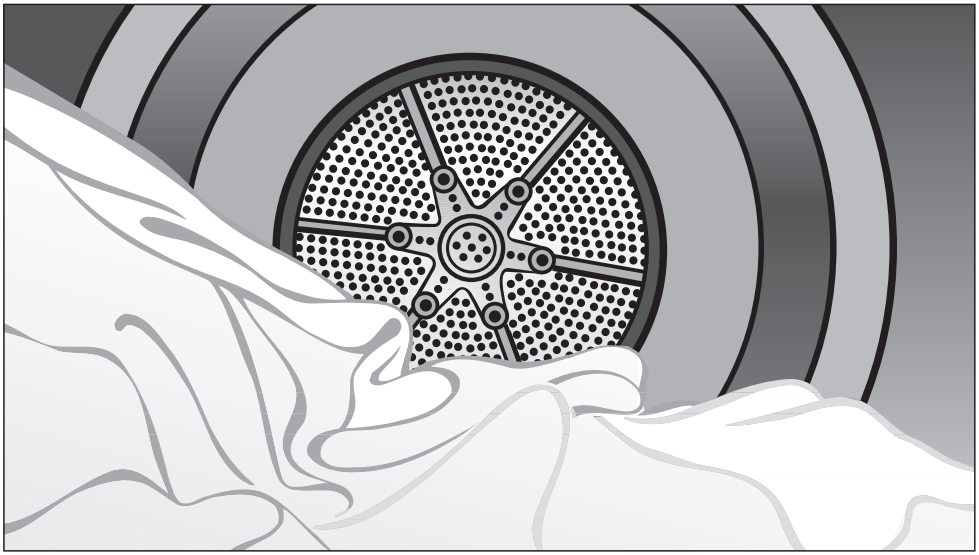

Operating instructions for vented tumble dryer T 284

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 627 980

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of your appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre or contact your Dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

– Make sure that your laundry is thoroughly spun before drying.

  The higher the spin, the greater the savings that can be made in energy and time during drying.

– Load according to the optimum amount of laundry recommended for the programme being used (see "Programme chart").

  Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.

– Make sure the room in which the dryer is located is well ventilated.

– Make sure the fluff filter is clean before using the dryer.

– Check all parts of the ventilation system on a regular basis and remove any build up of fluff etc.


– The vent ducting should be as short, straight and smooth as possible to minimise any resistance to the air throughflow.

Contents

Caring for the environment 2
Warning and Safety instructions 5
Control panel 10
Notes on laundry care 11
Care symbols 11
Tips on drying 11
How to dry correctly 12
Brief instructions 12
Low temperature 13
Changing the programme sequence 14
Changing a programme once it has started 14
Cancelling a programme once it has started and then selecting a different programme 14
Cancelling a programme once it has started and then removing the laundry . 14
Adding or removing laundry after a programme has started 14
Programme chart 15
Cleaning the fluff filter 17
Cleaning the grilles in the door opening 18
Cleaning the tumble dryer 18
Problem solving guide 19
General problems 19
Check and fault messages 22
Changing the lamp 23
After Sales service 24
Repairs 24
Future updates (PC) 24
Appliance guarantee 24
Optional accessories 24
Installation and connection 25
Front view 25
Rear view 26
Installation site 26
Transporting the appliance to its installation site 26
Building under a continous worktop / in a kitchen run 26
Levelling the appliance 27
Washer-dryer stack 27

Contents

Electrical connection 28
Electrical connection U.K. 28
Installation - venting 29
General 29
Calculating the effective duct length : 30
Installation to the rear, left or right side of the appliance 31
Venting systems 32
Ⓐ Flexible ducting hose 32
Ⓑ Plastic piping 34
Ⓒ Connect directly to a wall vent 35
Washer-dryer stack 36
Consumption data 37
Technical data 38
Programmable functions 40
Altering the residual moisture level in the Cottons programmes 40
Altering the residual moisture level in the Minimum iron programme 41
Anti-crease 42
Activating and deactivating the buzzer 43
Altering the standard drying level in the Automatic programme 44
Extending the cooling down time 45
Standby 46

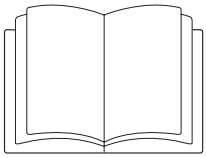

▶ It is **essential** to read these instructions.

This tumble dryer conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the tumble dryer, please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

▶ This tumble dryer is for domestic use only and can only be used to dry items which have been washed in a water solution and which are marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging.
Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it by a person responsible for their safety.

Safety with children

▶ Keep children away from the tumble dryer at all times. It is not a toy! To avoid the risk of injury do not allow them to play on or near it or to play with its controls. Supervise children whilst you are using it.

▶ Older children may only use it if its operation has been clearly explained to them, and they are able to use it safely, recognising the dangers of incorrect use.

Technical safety

▶ Before setting up the tumble dryer, check it for any externally visible damage.
Do not install or use a damaged tumble dryer.

▶ Before connecting the tumble dryer, ensure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

▶ The electrical safety of this tumble dryer can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Do not connect the tumble dryer to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the tumble dryer (e.g. danger of overheating).

▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the tumble dryer until after maintenance or repair work has been carried out.

▶ Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the tumble dryer be guaranteed.

▶ If the connection cable is faulty it must only be replaced by a Miele approved service technician to protect the user from danger.

▶ In the event of a fault or for cleaning purposes, the tumble dryer is only completely isolated from the electricity supply when:

– it is switched off at the wall socket and the plug is withdrawn, or
– it is switched off at the mains, or
– the mains fuse is disconnected, or
– the screw-out fuse is removed (in countries where this is applicable).

▶ This tumble dryer may only be used in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer.

▶ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the tumble dryer and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.

Correct use

▶ To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:

– items which have not been washed.

– items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other deposits (such as cosmetics, lotions etc).
If items have not been thoroughly cleaned there is a danger that these might ignite when heated, even after they have been removed from the dryer at the end of the programme.

– items (e.g. mops and floorheads) which have been treated with inflammable cleaning agents or contain residues of acetone, alcohol, benzine, petrol, stain remover, turpentine, wax, wax remover or other chemicals.

– items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

When washing such heavily soiled items ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.

▶ To prevent the risk of fire, the following must not be dried in this tumble dryer:

– items which have been cleaned using chemicals (e.g. professional dry-cleaning agents).

– fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.

– damaged items which contain padding or fillings (e.g. pillows, jackets). When damaged, the filling can get out with the risk of igniting in the dryer.

▶ In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase has been completed.
Ensure that you always wait until the end of the programme before removing the laundry.

▶ **Warning**: Do not switch the tumble dryer off before the end of the drying programme. If this was done and the laundry was then removed immediately it could give off a great amount of heat.

▶ Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

▶ The dryer must not be used without the fluff filter in place or if the fluff filter is damaged in any way.

▶ The fluff filter must be cleaned regularly.

▶ The tumble dryer must not be used without vent ducting in place.

▶ The tumble dryer must not be connected to a chimney or vent flue which is in use.

▶ Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
The ambient room temperature should be between +2°C and +35°C

▶ Check all parts of the extraction system on a regular basis (e.g. wall vent, external grille, bends in the ducting etc.) and make sure they are all free of any hindrance. A build-up of fluff will prevent a free flow of air through the system. If the dryer is to be connected to an existing ducting system, this must be checked for suitability beforehand.

▶ The exhaust air must not be vented into a chimney or vent flue which is in use, nor should it be connected to ducting which ventilates rooms with fireplaces. It would be dangerous if smoke or exhaust fumes were drawn back into the room.

▶ Adequate ventilation is essential **to avoid the danger of asphyxia and toxic fumes** where another appliance which also uses the room air (e.g. gas, oil or coal fired heater, continuous flow or other water heater) is installed in the same or an adjacent room.
To ensure safe operation, and to prevent gases given off by these appliances being drawn back into the room, an underpressure of 0.04 mbar is the maximum permissible.
Ventilation can be maintained by:

– air inlets in the external wall which cannot be closed or blocked, or

– by fitting a window contact switch which ensures that the tumble dryer can only be operated when the window is opened wide enough.

If in doubt, the advice of a competent builder must be sought.

▶ Always keep the area around the tumble dryer free of dust and fluff. Particles of dirt entering the dryer can lead to blockages occurring.

▶ Do not let anyone sit or lean on the door, as this can cause the tumble dryer to tip up.

▶ Always close the door after use. This way you will avoid the danger of:

– children climbing onto or into the dryer or hiding things in it.

– pets or other small animals climbing into it.


▶ The tumble dryer must not be hosed down.

Accessories

▶ Only use genuine Miele spare parts and accessories with this appliance. If non-Miele parts are used, guarantee, performance and product liability claims may be invalidated.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

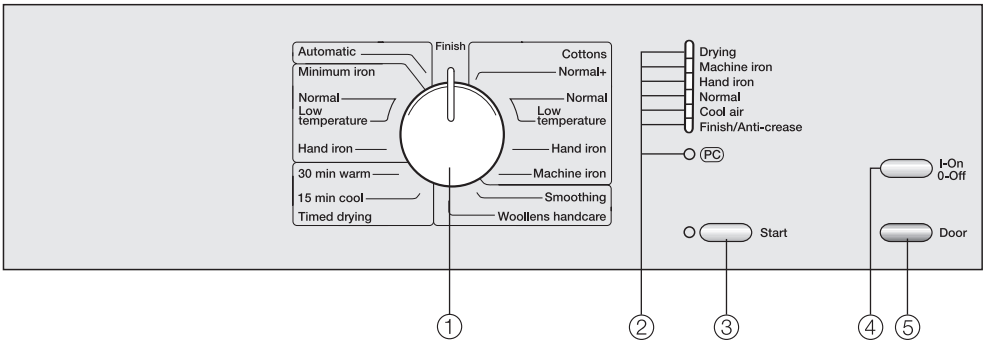

① **Programme selector**

The programme selector can be turned clockwise or anti-clockwise.

② **Programme sequence** and **check lamps**

③ ***Start* button**

Press the *Start* button to start a programme.
The *Start* indicator lamp will flash as soon as a programme can be started. It lights up constantly once the programme has started.

④ ***I-On/0-Off* button**

To switch the appliance on or off / to interrupt a programme.

The *Finish/Anti-crease* lamp will light up as confirmation that the tumble dryer has been switched on.

⑤ ***Door* Button**

To open the door / to cancel a programme.
Pressing this button will open the door even when the appliance is switched off at the mains.

If the appliance is switched on at the mains and the door is opened the drum lighting will come on. It will go out a few minutes later to save energy.

Care symbols

Before drying check the drying symbol on the care label. If there are no symbols, dry at your own risk!

⊡ . . . . . Dry at normal temperature
⊡ . . . . . Dry at a low temperature
⊠ . . . . . Do not tumble dry

– For delicates and fabrics with the following care label ⊡ select *Low temperature*.

Tips on drying

– Always observe the maximum recommended loads given in the "Programme chart". Never overload the drum.

Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

– Do not put soaking wet items into the tumble dryer. Spin them thoroughly after washing using the appropriate spin speed.

– Use the *Automatic* programme for drying mixed loads of cottons and minimum iron fabrics.

– Open jackets so that they can dry evenly.

– Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however, be partially dried using the *Woollens handcare* programme.

– Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.

– Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. It can be partially dried using the *Smoothing* programme.

– Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.

– Minimum iron fabrics tend to crease more, the greater the load. This is also the case for garments made from very fine weave fabrics, such as shirts or blouses.
If in doubt, reduce the load or use the *Minimum iron - Hand iron* programme.

– Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.

– New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments or even plastic components in the appliance. Dark coloured fibres can also settle on light coloured garments and vice versa.

Brief instructions

The headings numbered (❶, ❷, ❸ ...) show the operating sequence and can be used as a brief guide to using your dryer.

❶ Sort the laundry

To ensure an even drying result separate the washed laundry and sort it according to:
. . . the drying level required
. . . the type of fibre or weave
. . . size
. . . the moisture content after spinning.

⚠ Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.

– Check seams and stitching to ensure that padding and linings are intact.

– Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.

– Fasten hooks and eyes etc.

– Tie fabric belts and apron strings.

– Sew in or remove underwiring from bras.

❷ Turn on the tumble dryer

■ Switch the dryer on by pressing the *On/Off* button in.

The tumble dryer may be switched on after loading, saving energy as the light will not come on.


❸ Load the tumble dryer

■ Press the *Door* button to open the door.

■ Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme.
Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.


■ Before closing the door make sure the fluff filter is correctly positioned.

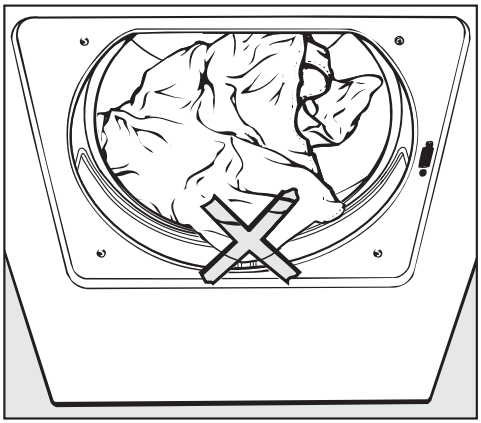

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

■ Shut the door either with a gentle swing, or lean against it and push it shut.

❹ Select a programme

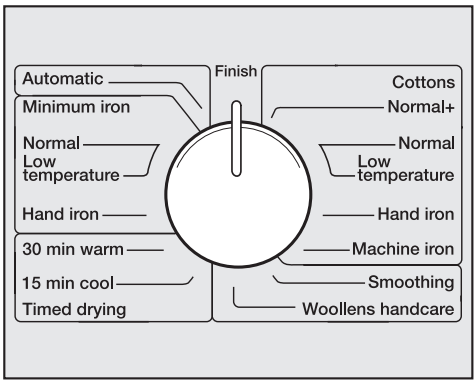

■ Turn the programme selector to the required programme.

Low temperature

■ For drying particularly sensitive fabrics (care symbol ⊡) e.g. acrylics turn the programme selector to the *Low temperature* position.

Because the heater rating is reduced for the *Low temperature* setting, clothes dry more slowly thus lengthening drying times.

❺ Start the programme

■ Press the *Start* button.

The indicator lamp for the *Start* button will then change from flashing to being on constantly.
The drying cycle begins.

Depending on the programme selected, the drying stage reached is shown by the sequence indicator lamps on the right hand side of the control panel.

Before the end of a programme

The cooling down phase takes place before the end of a programme so that the garments are not too hot to handle (the *Cool air* indicator lamp will come on). The programme is not finished until the cooling down phase is complete. The *Woollens handcare* and *Smoothing* programmes do not include a cooling down phase.

At the end of a programme

The *Finish/Anti-crease* indicator lamp comes on.

The drum will continue to rotate at intervals to prevent laundry creasing, if you do not wish to remove it immediately. The anti-crease phase lasts for an hour. There is no anti-crease phase on the *Woollens handcare* programme.

During the anti-crease phase . . .
. . . (depending on the programme selected) the indicator lamp for the drying stage reached will also light up.
. . . the buzzer will sound at intervals.

❻ Remove the laundry

- Press the *Door* button.
- Open the door.
- Remove the laundry.

Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

- Switch the dryer off by pressing the *I-On/0-Off* button.
- Clean the fluff filter.
- Close the door.

Changing the programme sequence

Changing a programme once it has started

You cannot change to another programme once a programme has started (this prevents unintentional alterations).
If you try and change a programme the *Finish/Anti-crease* light will start flashing.

You will need to cancel the current programme before you can select a new one.

Cancelling a programme once it has started and then selecting a different programme

- Turn the programme selector to *Finish*.
- Press the *Door* button.
- Close the door.
- Select another programme and start it.

Cancelling a programme once it has started and then removing the laundry

- Proceed as described in "Adding or removing laundry after a programme has started" below.
- Switch the dryer off after closing the door.

Adding or removing laundry after a programme has started

- Press the *Door* button.
- Open the door.

⚠ Danger of burning:
Do not touch the back of the drum when adding or removing items. The drum and the items can get very hot.

- Add or remove items as required.
- Close the door.
- Press the *Start* button.

Cottons	Max. load: 6 kg*
Normal+, Normal, Low temperature**	
Fabric type	Single and multi-layered cottons fabrics such as towelling, jerseywear, underwear, flannelette bed linen.
Note	– Select *Low temperature* for fabrics with the ⊡ symbol. Laundry is dried at a lower temperature.
Hand iron, Machine iron**	
Fabric type	Cottons and linen fabrics, e.g. table linen, bedlinen, starched laundry.
Note	To prevent laundry from drying out it should be rolled up until you are ready for ironing.
Minimum iron	Max. load: 3 kg*
Normal, Low temperature, Hand iron**	
Fabric type	Minimum iron items made of cotton, synthetic or blended fabrics, e.g. shirts, blouses, skirts and table cloths.
Notes	– Select *Low temperature* for fabrics with the ⊡ symbol (e.g. acrylic garments). Laundry is dried at a lower temperature. – Select *Hand iron* for delicate fabrics and to reduce creasing even more, reduce the load to 1.5 kg*. – In the Minimum iron *Hand iron* programme, items are dried with very little creasing, depending on fabric type and amount of load.

* Weight of dry laundry

** Note for test institutes:
Programme setting for testing in accordance with EN 61121

Programme chart


Automatic		Max. load: 3.5 kg*
Fabric type	Mixed load of garments suitable for Cottons and Minimum iron programmes.	
Timed drying		Max. load: 6 kg*
Warm air		
Fabric type	– Multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows. – For drying individual items, e.g. bath towels, swimwear, tea-towels.	
Cool air		
Fabric type	Any item which only needs airing.	
Woollens handcare		Max. load: 2 kg*
Fabric type	Woollen fabrics	
Notes	– To refresh and fluff up woollen garments quickly. Woollen fabrics are not dried completely by this programme. – Remove garments as soon as the programme has finished and leave to finish drying at room temperature.	
Smoothing		Max. load: 3 kg*
Fabric type	– Cottons and linen fabrics. – Minimum iron mixed fibre, cotton or synthetic items, e.g. trousers, jackets, shirts.	
Notes	– Smooths out creasing caused during the spin cycle in the washing machine. – Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.	

* Weight of dry laundry


Cleaning the fluff filter

The fluff which is created by the drying process is collected by the fluff filter. Clean the filter after **each** drying programme.

Tip: You can also use a vacuum cleaner to remove the fluff.

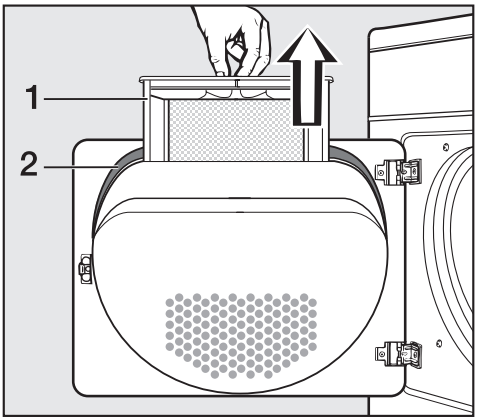


- Open the door and pull the fluff filter (1) out of the door as illustrated.

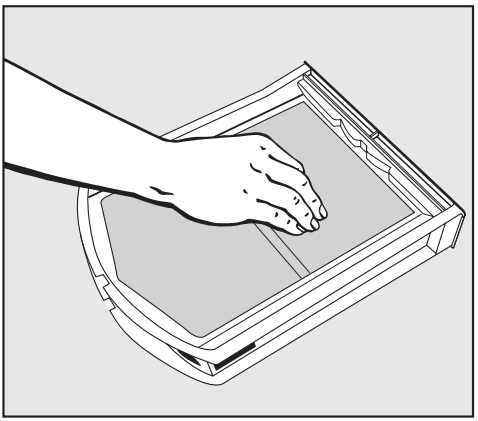

- Use your fingers to remove the fluff from the surface of the filter.
- Remove any fluff from the hollow part of the door. You could also use a cleaning brush which is available as an optional extra from your Miele dealer or the Miele Spare Parts Department, or use a vacuum cleaner.
- Also clean the door seal (2) with a damp cloth.
- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- The filter can be rinsed under hot running water if necessary. Dry it carefully before replacing it.

Cleaning the grilles in the door opening

Clean the grilles in the door opening and also the area underneath them from time to time.

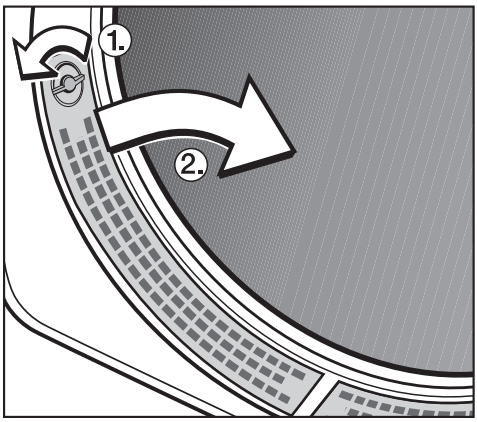

- Turn dial ① on each grille until you hear it click.
- Take hold of the dial, and pull the grille out of the door opening as shown ②. Do the same on the other side.
- Clean the grilles under hot running water, and dry thoroughly.
- Also clean the area underneath them, e.g. with a vacuum cleaner.
- Replace by inserting them at the bottom and pressing them into place at the top.
- Lock both dials (you will hear them click).

Cleaning the tumble dryer

Disconnect the tumble dryer from the mains electricity supply.

Miele branded cleaning and conditioning products are available to order via the internet on www.miele-shop.com.

- Clean the housing, control panel and door seal with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable stainless steel cleaner following the manufacturer's instructions.

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic sufaces and other parts. The tumble dryer must never be hosed down.

- Dry all parts with a soft cloth.

With the help of the following notes minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

⚠ Repair work to electrical appliances should only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

General problems

Problem	Possible cause	Remedy
The programme does not start.	No obvious cause.	– Is the dryer switched on? – Is the plug correctly inserted into the socket and switched on? – Is the door closed properly? – Has the fuse or circuit breaker tripped?
Power cut.	A programme which was running previously will continue automatically when power is restored to the tumble dryer as long as the Cooling down phase had not been reached.	
Items made of synthetic fibres are charged with static electricity after drying.	Synthetic fibres tend to attract static charge.	Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing programme or a fabric conditioner sheet to the load when drying.
The *Start* button indicator light flashes slowly.	The dryer is in Standby mode. This is quite normal and not indicative of any fault.	See "Programmable functions".

Problem solving guide

Problem	Possible cause	Remedy
There is a build-up of fluff.	Fluff is principally the result of friction when garments are being worn and washed. Machine drying hardly causes any fluff to form and has been established by research institutes to have no appreciable effect on the lifetime of fabric.	Fluff is collected by the fluff filter and can be easily removed (see "Cleaning and Care").
The laundry is not sufficiently dry.	The load consisted of different fabrics.	– Finish drying using the Warm air programme. – Select a more suitable drying programme next time (see "Programme chart").
The interior drum lighting does not come on.	The lighting switches off automatically (to save energy).	Switch the dryer off and then on again.
	The lamp needs changing.	Change the lamp as described at the end of this section.

Problem	Possible cause	Remedy
Drying is taking too long, or the programme has been cancelled	The dryer is not working efficiently or economically*. The most likely cause is a build-up of fluff, hair or detergent residue on the fluff filter.	– Remove any fluff, hair or residual detergents. – Rinse the fluff filter if necessary and dry it thoroughly before replacing it. – If the above measures do not remedy the problem follow the advice below.
	Ventilation to the dryer is insufficient, e.g. because it is installed in a room which is too small.	– Open a door or window while the tumble dryer is in operation for increased air flow.
	The vent ducting or the ventilation outlet is blocked.	– Check all parts of the vent ducting system on a regular basis (e.g. wall pipe, external grille, bends in the ducting etc.) and make sure they are all free of any hindrance. – Remove any fluff, hair or residual detergents.
	The laundry has not been spun sufficiently.	– Make sure that your laundry is thoroughly spun at the appropriate spin speed.
	The tumble dryer has been overloaded.	– Do not exceed the maximum load for the programme selected.
	Metallic components, e.g. zips, have prevented the dryer from registering the correct moisture level in the laundry.	– Open zips next time. – If the problem occurs again, dry garments with long zips using "Warm air" (timed drying).

*** Before attempting to remedy the problem:**

– Open and close the door.

– Switch the dryer off and then on again to start a programme.

Check and fault messages


Problem	Possible cause	Remedy
The programme stops and **the *Machine iron* or *Hand iron* indicator lamp flashes.** **The buzzer sounds.**	No obvious cause.	– Switch the dryer off and then on again. – Then start the programme again. If the programme stops again and the indicator light flashes again there is a fault. Contact the Miele Service Department.
The *Finish/Anti-crease* indicator lamp flashes while drying is in progress.	The programme selector was moved after the start of a programme. The programme continues to run as normal.	Turn the selector back to the original position and the indicator lamp will go out.
The programme stops and **the *Finish/Anti-crease* indicator lamp comes on.** **The buzzer sounds.**	This is not a fault. The electronic unit has recognised that there is no laundry in the drum and cancelled the programme. Drying individual garments or items which are already dry can also cause the programme to be cancelled.	Use the Warm air programme (timed drying) to dry individual items. Before changing a programme: Open and close the door.
The *Cool air* indicator lamp comes on and a continuous alarm sounds.	The dryer is not working efficiently or economically.	See the previous page under "Drying is taking too long ...".

Changing the lamp

Disconnect the tumble dryer from the mains electricity supply.

■ Open the door.

You will find the interior lamp cover at the top of the drum aperture.

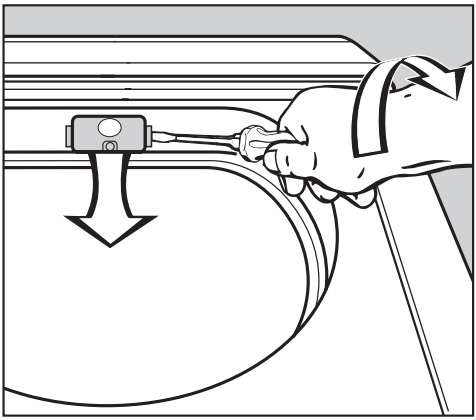

■ Insert a suitable tool, such as a wide bladed screwdriver, under the side edge of the lamp cover as illustrated.

■ Apply a little pressure and whilst doing so turn your wrist in the direction of the arrow to open the cover.

The cover will open downwards.

The temperature resistant lamp should only be ordered from your Miele Dealer or the Miele Spare Parts Department.

The lamp specification and maximum wattage is stated on the data plate and on the lamp cover.

■ Replace the lamp.

■ To close the cover push it upwards and press it on the left and right until you hear it click into position.

⚠ Ensure that it is fitted into position securely, as any moisture could cause a short circuit.


Repairs

In the event of any faults which you cannot remedy yourself, please contact

– your Miele dealer or

– the Miele Service Department (see back cover for contact details).

When contacting your dealer or the Service Department, please quote the model and serial number of your appliance, both of which are shown on

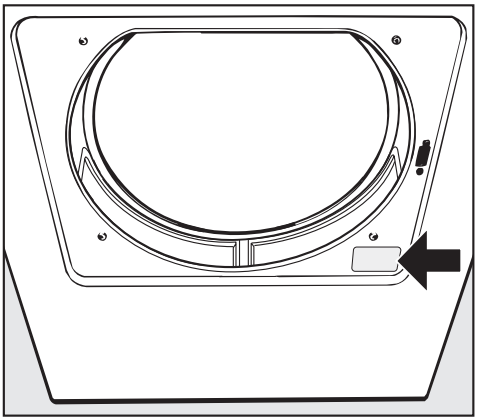

the data plate situated on the right hand side below the drum aperture.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Future updates (PC)

The indicator or check light marked **PC** on the fascia panel is the interface used by the Miele service technicians during service work for testing purposes and for updating the appliance's programme data.

Appliance guarantee


Please see the guarantee card supplied with your appliance.

Optional accessories

Optional accessories for this dryer are available from your Miele Dealer, the Miele Spare Parts Department or via the internet at www.miele-shop.com.

Please note that telephone calls may be monitored and recorded for training purposes.

Front view

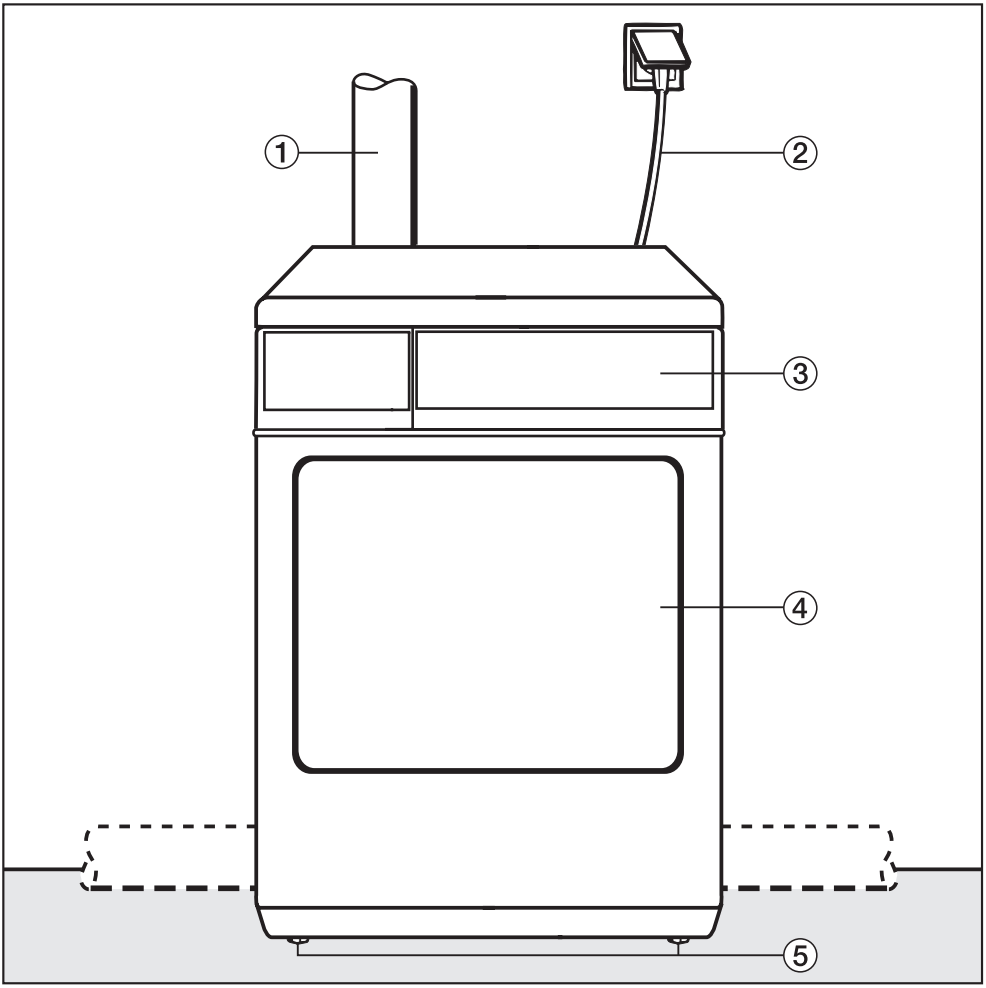

① Venting connection: rear, right or left
(supplied with the rear socket open)


② Mains connection cable

③ Control panel

④ Door

⑤ Four height adjustable screw feet

Rear view

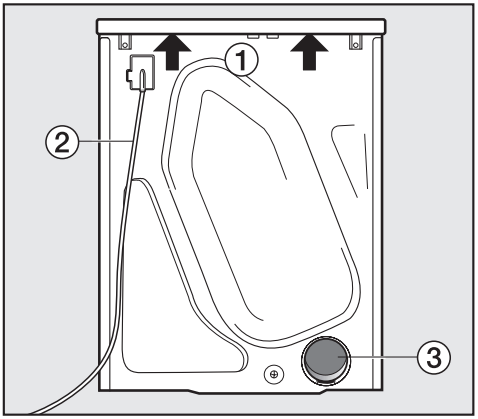

① Protruding lid for holding when moving the appliance (see arrows)

② Mains connection cable

③ Venting connection at the rear

Installation site

⚠ Make sure the dryer door can be opened without hindrance after installation.

Transporting the appliance to its installation site

When moving the appliance, hold it by the lid where it protrudes to the rear of the dryer. To manoeuvre the dryer out of its packing case to its installation site hold it by the **front feet and at the back of the lid**.

Building under a continous worktop / in a kitchen run

⚠ A **building-under kit*** with a coverplate to replace the appliance lid is required. It must be fitted by suitably qualified person to ensure electrical safety.

N.B. If you wish to push your appliance under a worktop and there is space to do this without removing the lid the building-under kit is not necessary. Otherwise it is essential.

– The building-under kit is supplied with its own installation instructions.
– N.B. When built under drying times may be longer.
– The electrical socket must be located in an accessible position near the appliance.
– The space required by the vent duct must be taken into consideration when calculating the distance between the tumble dryer and a wall or other appliances or furniture on either side.

With niche heights of:


– 830-840 mm, longer screw feet* are required.
– 870-885 / 915-930 mm, one or two raising kits* are required.

* Miele accessory available to order


Replacing the lid

If the lid has been removed in order to fit a coverplate, ensure that, if the lid is ever replaced, it fits securely into the rear holders. Otherwise, it is not properly secure for transport.

Levelling the appliance

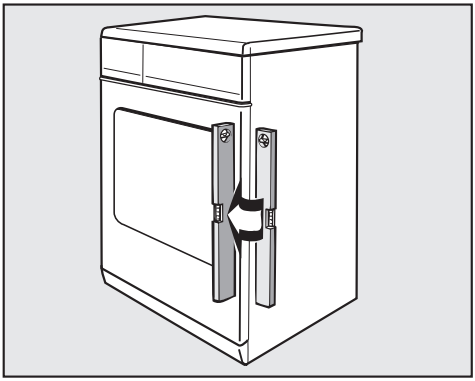

The appliance must be perfectly level to ensure safe and proper operation.

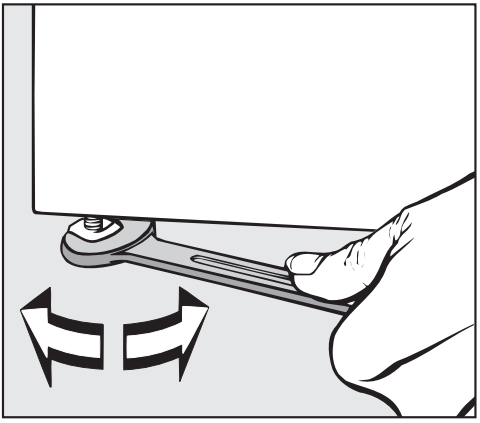

- The screw feet can be adjusted to compensate for any unevenness in the floor.

⚠ Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet, etc. This would hinder a sufficient flow of air to the dryer.

Washer-dryer stack

The tumble dryer can also be combined with a Miele washing machine in a washer-dryer stack. The appropriate "WTV" stacking kit (available to order) to match your dryer is required.

⚠ Stacking kits must only be installed by a suitably qualified fitter.

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance is supplied with a mains cable with moulded plug ready for connection to a 230-240V mains supply. Please ensure the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD). Contact a qualified electrician for advice.

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING: THIS APPLIANCE MUST BE EARTHED

General

Important

Before operating the tumble dryer, a suitable ducting system must be installed to carry the moist air from the dryer to the outside. This can be:
. . . flexible ducting hose, or plastic piping connected to the dryer, or
. . . the dryer may be connected directly to the wall vent.

– Before installing the ducting system, ensure that the appliance is not connected to the power supply.

– The ducting outlet (e.g. wall pipe) should be installed in such a way that the moist expelled air . . .
. . . cannot be drawn back into the room in which the dryer is installed;
. . . cannot cause any damage to the building or other nuisance.

– The dryer uses the room air. It is therefore essential to ensure adequate ventilation to avoid the **danger of asphyxia** caused by gases given off by other appliances being drawn back into the room. Insufficient ventilation will also cause drying times to be considerably longer.
Ventilation can be maintained by:
- an open window;
- an air inlet which cannot be blocked in windows, doors and outside wall vents;
- a window switch which prevents the dryer being used when the window is closed.

Avoid:

– very long ducting systems

– too many bends or corners, tight corners

Otherwise the drying result will be less effective and it will take longer and use more energy.

Suitable materials

– for the ventilation ducting:
flexible ducting* or plastic piping with a diameter of at least 100 mm.

– for venting to the outside:
a wall pipe kit* or a window vent kit*.

* Available as an optional accessory from your Miele dealer or the Miele Spare Parts Department.

Procedure

■ First measure the duct length required. Calculate the effective duct length and establish the internal duct diameter required (use the tables on the next page).

■ The longer the ducting, the larger the internal diameter of the ducting required.

■ Then decide which type of ducting you want to use (see "Venting systems" in this section).

Calculating the effective duct length :

Friction against the inner walls of the ducting will slow down the expelled air as it passes through. An elbow, bend, non-return flap or wall vent creates more friction than a straight duct. The friction created by each of these is expressed as an **additional duct length factor**. The additional length factors are calculated by comparing the friction created by, for example, an elbow to that created by 1 metre of straight plastic piping (Table I).

The additional duct length factor for each item needs to be added together to ascertain the **effective duct length** required.

A larger **internal duct diameter** also helps reduce friction. If the effective duct length is **more than 20 m** the duct diameter should be increased (Table II).

1. To calculate the effective duct length required:

- First measure the distance which will require straight ducting. Multiply this amount by the corresponding additional duct length factor in **Table I**.
- Establish the number of angles, bends etc. necessary and add their additional duct length factors together with the help of **Table I**.
- Add all the additional duct length factors together to get the effective duct length.

2. Internal duct diameter

- Refer to **Table II** for the appropriate duct diameter required.


Table I

	Additional duct length factor
Flexible ducting*	
– 1 m laid straight	1.8 m
– 45° angle (Bend radius = 0.25 m)	1.5 m
– 90° angle (Bend radius = 0.25 m)	2.5 m
Flexible aluminium vent hose* / plastic piping	
– 1 m laid straight / or 1 m straight pipe	1.0 m
– 45° angle / elbow (Bend radius = 0.25 m)	0.6 m
– 90° angle / elbow (Bend radius = 0.25 m)	0.8 m
Wall vent kit* or window vent kit*	
– with louvred grille	3.8 m
– with non-return flap (hinged flap)	1.5 m
Non-return flap* to be integrated into the vent ducting	14.3 m
Flat ducting (for washer dryer stack)*	11.0 m
Venting connection to the left/right	1.0 m
*optional accessory from Miele	

Table II

Maximum effective duct length allowable	Internal duct diameter required
20 m	100 mm
40 m	125 mm
100 m	150 mm

Calculation example

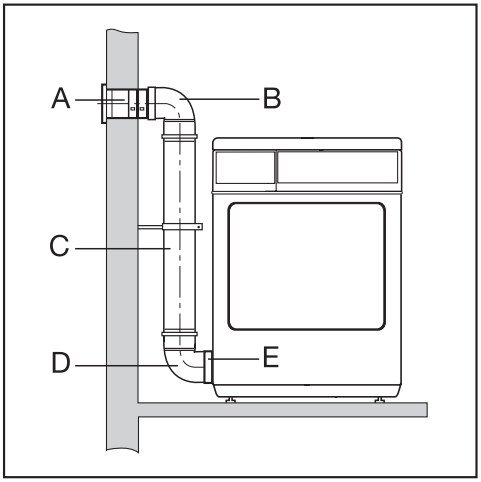

A	**Wall pipe, with louvred vent**	
	= 1 x 3.8 m Additional duct length	= 3.8 m
B/D	**2 Elbows, 90°**	
	= 2 x 0.8 m Additional duct length	= 1.6 m
C	**0.5 m plastic piping**	
	= 0.5 x 1 m Additional duct length	= 0.5 m
E	**Side connection, left**	
	= 1 m Additional duct length	= 1.0 m
	Effective duct length	= 6.9 m

Result: A duct diameter of 100 mm is adequate as the effective duct length is less than the 20 m specified in Table II.


Installation to the rear, left or right side of the appliance

At the rear

The dryer is delivered with this connection open.

- Fit one of the venting systems described on the following pages.

Left or right side of the appliance

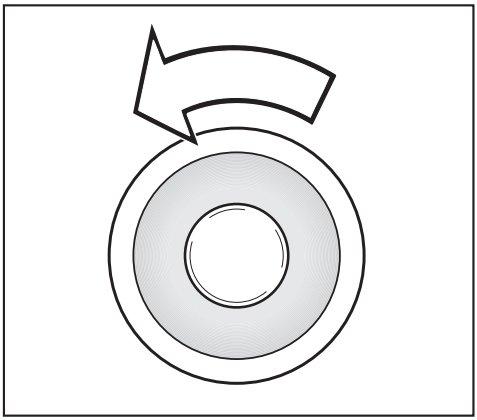

- Turn the cover flap anti-clockwise.
- Refit it securely in the rear outlet.
- Fit one of the venting systems described on the following pages.

Venting systems

The various venting systems which are possible are described on the following pages.

Ⓐ Flexible ducting hose


Ⓑ Plastic piping

Ⓒ Connecting directly to a wall vent

Ⓐ Flexible ducting hose

This is a simple, cost effective way of directing the moist air outside. The adapter supplied is fitted into the vent opening on the dryer and the 100 mm ∅ ducting hose is then connected to the adapter.

■ The following items are required: . .
. . . flexible ducting hose
. . . a wall vent kit* or window vent kit*.
* (Miele optional accessory).

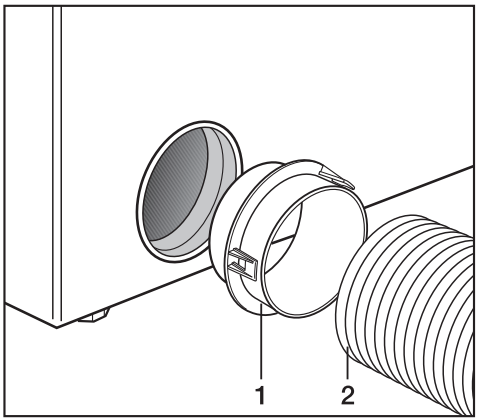


❶ Insert adapter (1) into the vent opening on the dryer.

❷ Attach the hose (2).

■ Installation examples are shown on the next page.


Installation examples

Window vent

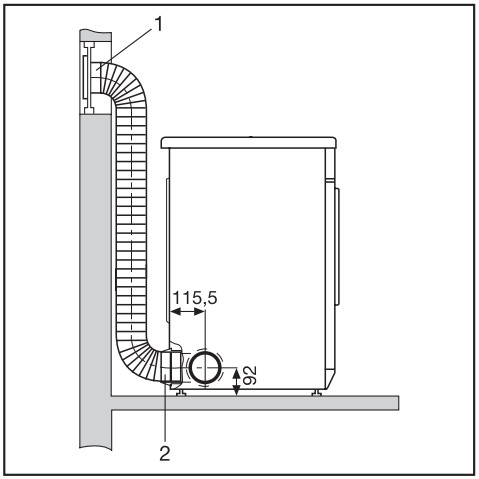

1. Window vent kit (fitted in a "plexiglass" pane)
   (separate fitting instructions are supplied with the Miele window vent kit)
2. Adapter for flexible hose

Connection to an exhaust flue

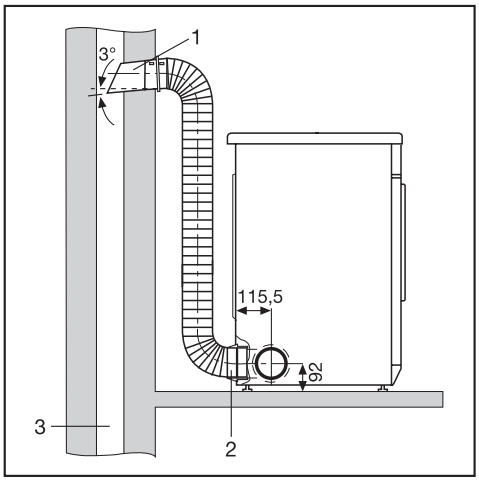

1. Pipe with connection piece
   (= supplied with the Miele wall vent kit)
2. Adapter for flexible hose
3. Exhaust flue insulated against damp

⚠ The ducting must not be vented into a chimney or vent flue which is in use, nor should it be connected to ducting which ventilates rooms with fireplaces.

Ⓑ Plastic piping

Plastic piping is a good option where the vented air has to be ducted for some distance. The smooth walls of the pipe create less friction for the vented air than the walls of a flexible vent hose, for example. Time and energy consumption are better with plastic piping.


The following items are required:

– An adapter* (∅ 100 mm).

– A wall vent kit* or window vent kit*.


– Suitable piping (∅ 100 mm) is available from your dealer or builders merchants. Where the pipe diameter is more than 100 mm, an adapter is necessary (e.g. from ∅ 100 to 125 mm) to connect the pipe to the dryer.

* Available as an optional accessory from your Miele dealer or the Miele Spare Parts Department.

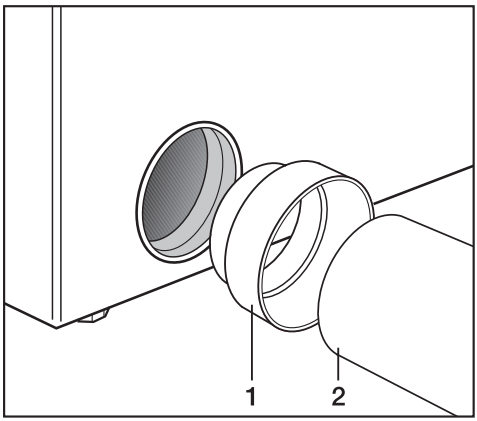

■ The plastic pipe (2) is connected to adapter (1) which is fitted into the vent opening on the dryer.

Example

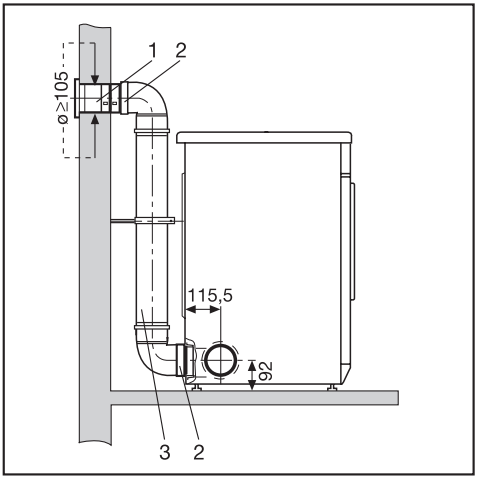


1. Wall vent kit
   (Separate fitting instructions are supplied with the Miele wall vent kit).
2. Adapter
3. Plastic piping, diameter DN 100

Ⓒ Connect directly to a wall vent

The best method of venting the dryer is to connect it directly to the outside wall of a room. Time and energy consumption are better with plastic piping. This involves boring through an outside wall.

A wall pipe* and a flexible foam gasket* must be used
(* Miele optional accessories).


❶ Before drilling into the wall, . .
. . . please read the installation instructions supplied with the Miele wall vent kit.
. . . and study the following diagrams.

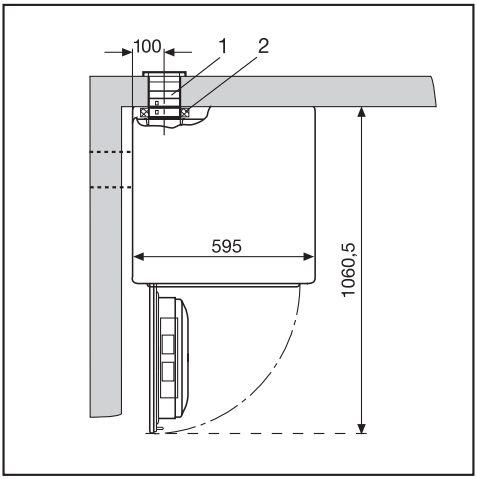


View from above:

1. Wall pipe
2. Flexible foam gasket

Side view:

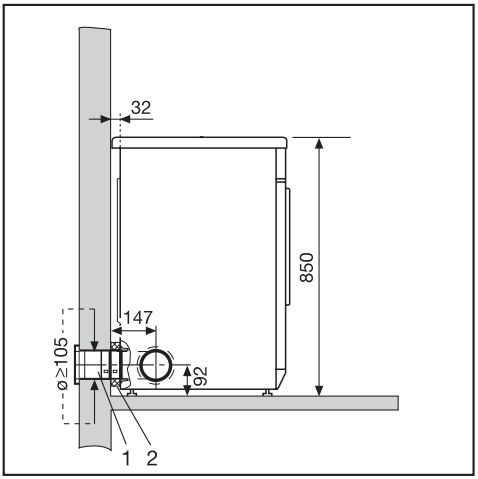

1. Wall pipe
2. Flexible foam gasket

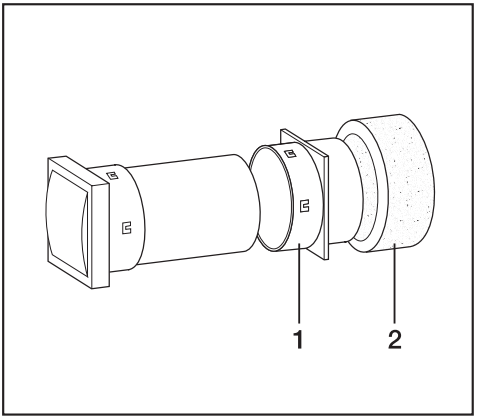


❷ Fit the foam gasket (2) onto the adapter (1) on the wall pipe.

❸ Push the dryer up against the wall.

Washer-dryer stack

Height of venting outlet for washer/dryer stack

Example: Miele washing machine with straight or sloping fascia

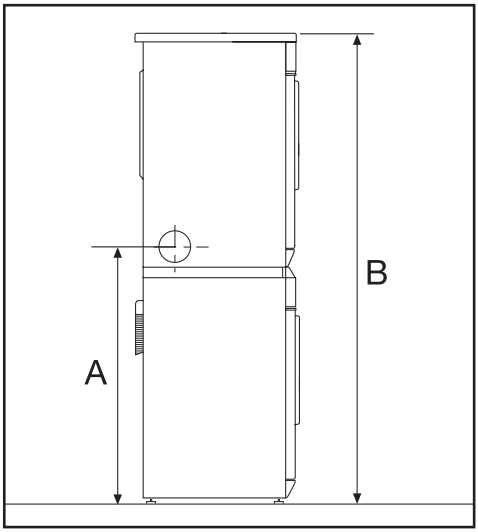

Stacking kit* without pull-out shelf:

A = 94.2 cm

B = 170.0 cm

Stacking kit* with pull-out shelf:

A = 92.8 cm

B = 168.6 cm

* Miele accessory available to order

Programme	Load	Final spin speed in a domestic washing machine	Energy	Time
	kg*	rpm	kWh	Minutes
Cottons Normal	6.0	1000 (60 % residual moisture)**	3.20	79
		1200	2.90	72
		1400	2.75	68
		1600	2.45	62
		1800	2.40	60
Cottons Hand iron	6.0	1000 (60 % residual moisture)**	2.45	59
		1200	2.15	52
		1400	2.00	49
		1600	1.70	42
		1800	1.65	41
Minimum iron Normal	3.0	1200 (50 % residual moisture)**	1.05	30
Minimum iron Hand iron	3.0	1200	0.90	26
Automatic	3.5	800	1.80	52
Woollens handcare	2.0	1000	0.15	4
Smoothing	3.0	1000	0.30	8

* Weight of dry laundry

** EN 61121:2005 test programme

All data without a "star" against it was calculated using EN 61121:2005.

Before testing in accordance with EN 61121, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the Cottons Normal programme.

Consumption data can vary from the nominal values given above depending on the size of the load, type of textiles, residual moisture levels after spinning and fluctuations in the electricity supply.

Technical data

Height	850 mm
Width	595 mm
Depth	587 mm
Depth with door open	1,062 mm
Height for building under	820 mm
Width for building under	600 mm
Depth for building under	600 mm
Suitable for pushing under a worktop	yes
Suitable for stacking	yes
Weight	45 kg
Drum volume	111 litres
Maximum capacity	6 kg dry weight
Length of connection cable	2 m
Voltage	see data plate
Connected load	see data plate
Fuse rating	see data plate / plug
Lamp wattage	see data plate
Energy consumption	see "Consumption data"
Test certificates awarded	see data plate

Programmable functions for changing default settings

The programmable functions are used to alter the tumble dryer´s electronics to suit changing requirements.
Programmable functions can be altered at any time.

Altering the residual moisture level in the Cottons programmes

The tumble dryer is designed to dry effectively using as little energy as possible.
However, if you require the laundry to be drier or damper, you can increase or reduce the default residual moisture in the Cottons programmes.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

The *Cool air* lamp will flash once.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: the **residual moisture level will be increased and laundry will be damper**.

– If the *Drying* lamp flashes once: the **residual moisture level will remain on the standard setting (factory default setting)**.

– If the *Drying* lamp flashes twice: the **residual moisture level will be reduced and laundry will be drier**.

❺ Pressing the *Start* button switches between the 3 options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after checking the setting as described above.

Altering the residual moisture level in the Minimum iron programme

The tumble dryer is designed to dry effectively using as little energy as possible.
However, if you require the laundry to be drier or damper, you can reduce or increase the default residual moisture in the Minimum iron programme.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Cottons Normal+*.

The *Cool air* lamp will flash twice.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: the **residual moisture level will be increased and laundry will be damper**.

– If the *Drying* lamp flashes once: the **residual moisture level will remain on the standard setting (factory default setting)**.

– If the *Drying* lamp flashes twice: the **residual moisture level will be reduced and laundry will be drier**.

❻ Pressing the *Start* button switches between the 3 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

Anti-crease

If laundry is not removed as soon as the programme has finished, the drum will continue to rotate at intervals for two hours to prevent creasing.

The anti-crease function

– is activated when the tumble dryer is delivered. You can shorten the duration of the anti-crease phase or deactivate it if wished.

– is used in all programmes except *Woollens handcare*.

– should be left activated.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Cottons Normal*.

The *Cool air* lamp will flash three times.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: **Anti-crease is deactivated**

– If the *Drying* lamp flashes once: **Anti-crease will last for 1 hour**

– If the *Drying* lamp flashes twice: **Anti-crease will last for 2 hours (factory default setting).**

❻ Pressing the *Start* button switches between the 3 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

Activating and deactivating the buzzer

A buzzer sounds (at intervals for a maximum of 1 hour) to let you know the programme has finished.

The tumble dryer is delivered with the buzzer activated but you can deactivate it if wished.

If there is a fault, a continuous tone will sound even if the buzzer has been deactivated.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Cottons Low temperature*.

The *Cool air* lamp will flash four times.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: **the buzzer is deactivated**

– If the *Drying* lamp is flashing: **the buzzer is activated (factory default setting)**.

❻ Pressing the *Start* button switches between the 2 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

Altering the standard drying level in the Automatic programme

The drying level for this programme is set at a standard *Normal* level. You have the option of changing this to an increased *Normal+* (drier than *Normal*) or to *Hand iron* (damper than *Normal*) drying level.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Machine iron*.

The *Cool air* lamp will flash six times.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: **the standard drying level is *Hand iron***

– If the *Drying* lamp flashes once: the **standard drying level will remain on the *Normal* setting (factory default setting)**.

– If the *Drying* lamp flashes twice: **the standard drying level is *Normal+*.**

❻ Pressing the *Start* button switches between the 3 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

Extending the cooling down time

The cooling down phase which takes place before the end of a programme can be lengthened if required. This makes the garments easier to handle.

The dryer is delivered with the extended cooling down time option deactivated. You can extend the cooling down time by 5 minutes or 10 minutes.

The option of extending the cooling down time is available with the *Cottons, Minimum iron* and *Automatic* programmes.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Smoothing*.

The *Cool air* lamp will flash seven times.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* indicator lamp is not flashing: **the cooling down time is not extended (factory default setting)**.

– If the *Drying* lamp flashes once: **the cooling down time will be extended by five minutes.**

– If the *Drying* lamp flashes twice: **the cooling down time will be extended by ten minutes.**

❻ Pressing the *Start* button switches between the 3 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

Standby

To save energy, the programme sequence/check lamps go out and the indicator lamp for the *Start* button starts flashing slowly.

To come out of standby mode

- Turn the programme selector or press the *Start* button. Neither will have any effect if a programme is running.

Factory default

The standby function is activated and the programme sequence/check lamps will go out after 10 minutes:

– if a programme is not selected after the dryer has been switched on.

– after a programme has started.

They will, however, come on for 10 minutes at the end of the programme or the end of the anti-crease phase. The buzzer (if selected) will sound for 10 minutes at the end of the programme.

Instead of the factory default setting you can select another option:

Not in current programme

As described under "Factory default" above.
However, they will stay on after the programme has started and remain visible during the programme.

Off

The programme sequence/check lamps will stay on while the dryer is switched on.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

- See next page.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

– The programme selector is at *Finish*.

❶ Press the *Start* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

❸ Wait until the *Start* indicator lamp lights up constantly . . .

❹ . . . and then release the *Start* button.

❺ Turn the programme selector to *Woollens hand care*.

The *Cool air* lamp will flash eight times.

The **flashing sequence of the *Drying* lamp** shows which option is currently selected.

– If the *Drying* lamp is not flashing: the **Factory default setting** has been selected.

– If the *Drying* lamp flashes once: **Not in current programme** has been selected.

– If the *Drying* lamp flashes twice: **Off** has been selected.

❻ Pressing the *Start* button switches between the 3 options.

❼ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❺.

■ Switch the dryer off after checking the setting as described above.

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Hong Kong
Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Tel: +852- 2610-1331, Fax: +852-2610-1013
E-mail: mielehk@miele.com.hk
Internet: www.miele.hk

India
Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Ireland
Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved/3409

M.-Nr. 07 627 980 / 00

CE