
Operating instructions

Under-worktop refrigerator, Pull-out drawer

GB

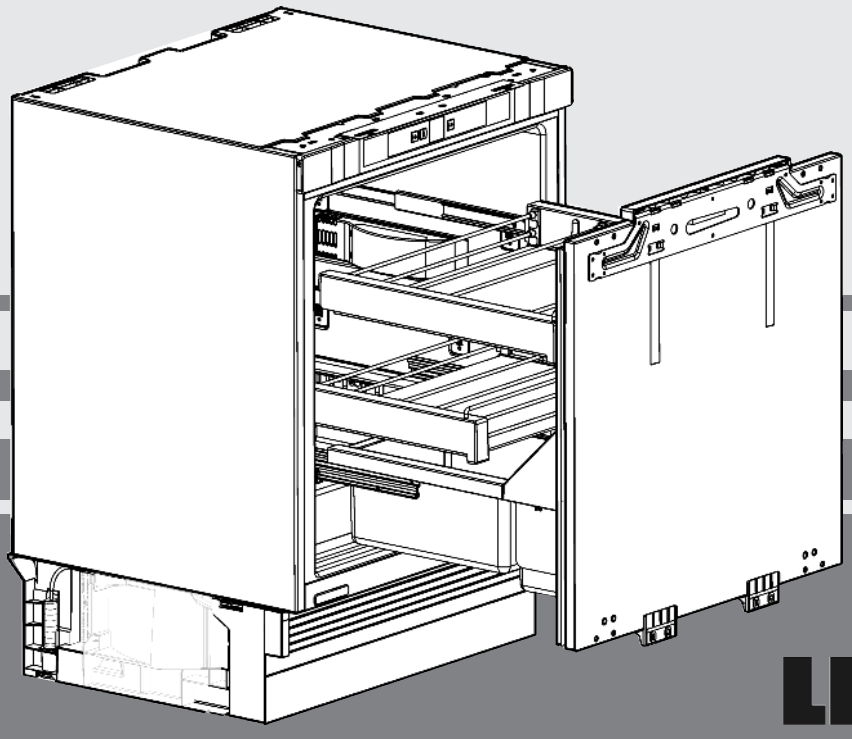

020511 **7085066 - 00**

UIK1550/ UIK1510 ... 3

LIEBHERR

Contents

1	**Appliance at a glance**	**2**
1.1	Description of appliance and equipment	2
1.2	Range of appliance use	2
1.3	Conformity	3
1.4	Saving energy	3
2	**General safety information**	**3**
3	**Controls and displays**	**3**
3.1	Operating and control elements	3
3.2	Temperature display	3
4	**Putting into operation**	**3**
4.1	Transporting the appliance	3
4.2	Installing the appliance	4
4.3	Installation	4
4.4	Adjusting the contact of the door seal	7
4.5	Disposing of packaging	9
4.6	Connecting the appliance	9
4.7	Switching on the appliance	9
5	**Control**	**9**
5.1	Food refrigeration	9
5.2	Setting the temperature	9
5.3	SuperCool	10
5.4	Relocating the retainers	10
5.5	Partitioning the vegetable bin	10
5.6	Storage in the recess at the base	10
6	**Maintenance**	**10**
6.1	Defrosting	10
6.2	Cleaning the appliance	10
6.3	Replacing the interior light	11
6.4	Customer service	11
7	**Malfunction**	**12**
8	**Decommissioning**	**12**
8.1	Switching off the appliance	12
8.2	Taking the appliance out of service	12
9	**Disposing of the appliance**	**12**

The manufacturer works constantly on the further development of all the types and models. Therefore please understand that we have to reserve the right to make design, equipment and technical modifications.

To get to know all the benefits of your new appliance, please read the information contained in these instructions carefully.

The instructions apply to several models. Differences may occur. Text relating only to specific appliances is marked with an asterisk (*).

Instructions for action are marked with a ▶, the results of action are marked with a ▷.

1 Appliance at a glance

1.1 Description of appliance and equipment

Note

▶ Place food inside the appliance as shown in the diagram. This allows the appliance to save energy during operation.

▶ Shelves, drawers and baskets are arranged for optimum energy efficiency on delivery.

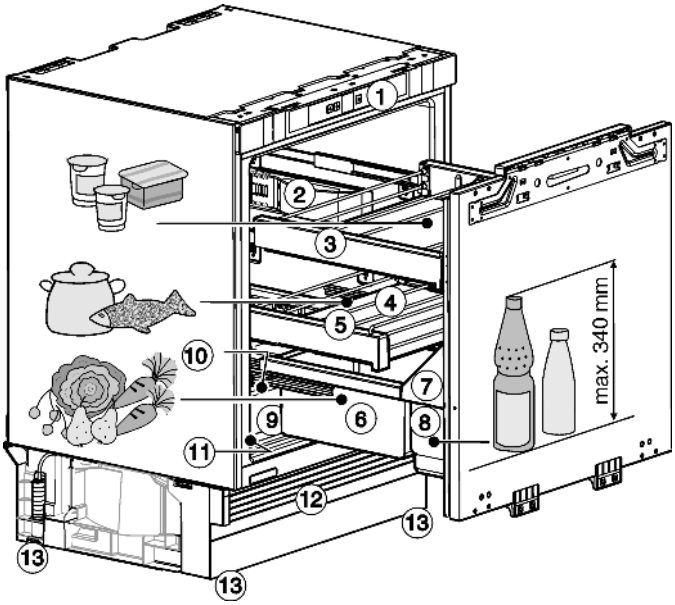


Fig. 1

(1) Operating panel
(2) Interior light*
(3) Extending shelf
(4) Relocatable retainers
(5) Extending shelf, coldest zone
(6) Vegetable bin
(7) Bottle rack
(8) Adjustable door
(9) Storage recess at the base
(10) Water drain
(11) Type plate
(12) Adjustable plinth panel
(13) Height-adjustable feet, front and back

1.2 Range of appliance use

The appliance is suitable solely for cooling food in a domestic environment or similar. This includes use in, for example

- in staff kitchenettes, bed and breakfast establishments,
- by guests in country homes, hotels, motels and other forms of accommodation,
- in catering and similar services in the wholesale trade

Use the appliance solely as is customary within a domestic environment. All other types of use are inadmissible. The appliance is not suitable for storing and cooling medicines, blood plasma, laboratory preparations or similar substances and products covered by the 2007/47/EC Medical Devices Directive. Misuse of the appliance can result in the stored products suffering harm or perishing. Furthermore, the appliance is not suitable for operation in potentially explosive atmospheres.

The appliance is suitable for integrated, under-worktop use.

The appliance is set to operate within specific ambient temperature limits according to its climate rating. The correct climate rating for your appliance is indicated on the type plate.

Note

▶ Compliance with the ambient temperatures indicated is required, otherwise the cooling performance is reduced.

Climate rating	for ambient temperatures of
SN	10 °C to 32 °C
N	16 °C to 32 °C
ST	16 °C to 38 °C
T	16 °C to 43 °C

1.3 Conformity

The refrigerant circuit has been tested for leaks. When installed, this appliance complies with the relevant safety provisions and EC directives 2006/95/EC and 2004/108/EC.

1.4 Saving energy

- Always ensure good ventilation. Do not cover ventilation openings or grille.
- Do not place appliance in areas of direct sunlight or next to a stove, heater or similar object.
- The energy consumption depends on the installation conditions, e.g. the ambient temperature (see 1.2) .
- Keep the time the appliance is open to a minimum.
- The lower the temperature setting, the higher the power consumption.
- Store food logically. (see Appliance at a glance).
- Ensure that all food is well packed and covered for storage. This will prevent frost from forming.
- Remove food as needed in order that it does not warm too much.
- First cool warm food to room temperature before storing it .

2 General safety information

Danger for the user:

- This appliance is not designed for persons (including children) with physical, sensory or mental impairment or persons not having sufficient experience and knowledge, unless they are instructed in the use of the appliance and are initially supervised by a person responsible for their safety. Keep children under supervision to ensure they do not play with the appliance.
- In case of a fault, pull out the mains plug (not by pulling the connecting cable) or switch off the fuse.
- Have any repairs to or intervention in the appliance, and any change of the mains power cable, carried out by the customer service only or by other specialised personnel trained for the purpose.
- When disconnecting the appliance from the supply, always take hold of the plug. Do not pull the cable.
- Only install and connect the appliance according to the instructions.
- Only use the appliance when it is installed.
- Please keep these instructions in a safe place and pass them on to any subsequent owners.
- Special-purpose lamps (incandescent lamps, LEDs, fluorescent tubes) in the appliance serve to illuminate the appliance interior and are not suited for room illumination.

Fire hazard:

- The refrigerant R 600a is environmentally friendly but flammable. Escaping refrigerant may ignite.
  - Do not damage the refrigerant circuit pipes.
  - Do not allow naked flames or ignition sources to enter the appliance.
  - Do not use any electrical appliances in the interior (e.g. steam cleaners, heaters, ice cream maker etc.).
  - If refrigerant escapes: eliminate naked flames or sources of ignition from the vicinity. Pull out the power plug. Ventilate the area well. Notify customer service.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. To identify these spray cans, look for the list of contents printed on the can, or a flame symbol. Gases possibly escaping may ignite due to electrical components.
- Always store high-percentage alcohol in tightly sealed, upright containers. Alcohol possibly escaping may ignite due to electrical components.

Danger of tipping and falling:

- Do not misuse the plinth, drawers, doors etc. as a step or for support. This applies particularly to children.

Danger of food poisoning:

- Do not consume food which has been stored too long.

Danger of frostbite, numbness and pain:

- Avoid lasting skin contact with cold surfaces or refrigerated/ frozen food or take protective steps, e.g. wear gloves. Do not consume ice cream, water ice or ice cubes immediately and do not consume them too cold.

Please observe the specific information in the other sections:

⚠	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
⚠	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
⚠	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.

	Note	identifies useful information and tips.

3 Controls and displays

3.1 Operating and control elements

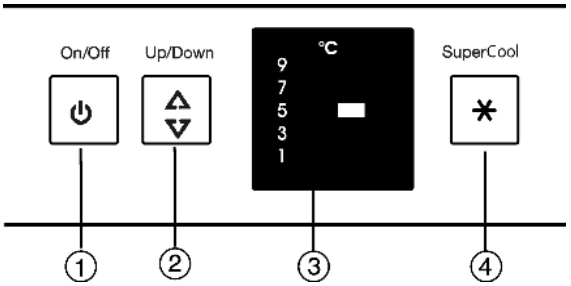


Fig. 2

(1) On/Off button
(2) Setting button
(3) Temperature display
(4) SuperCool button

3.2 Temperature display

The following are displayed in normal operation:

- the set cooling temperature

4 Putting into operation

4.1 Transporting the appliance

⚠ **CAUTION**

Risk of injury and danger of damage as a result of incorrect transport!

▶ Transport the appliance in a packed condition.
▶ Transport the appliance upright.
▶ Do not transport the appliance without assistance.

GB

4.2 Installing the appliance

In the event that the appliance is damaged, contact the supplier immediately before connecting to the mains.

The floor at the site must be flat and level.

Do not install the appliance in a location where it is exposed to direct radiation of the sun, next to a cooker, heater and similar.

The appliance is suitable for integrated, under-worktop use.

Do not install the appliance without assistance.

Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m^2 per 8 g of R 600a refrigerant used in the appliance. If the room in which the appliance is installed is too small, a flammable gas-air mixture may form in the event of a leakage in the refrigeration circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.

WARNING
Fire hazard due to dampness!
If live parts or the mains lead become damp this may cause short circuits.
- ▶ The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- ▶ Only use the appliance when it is installed.

WARNING
Fire hazard due to refrigerant!
The refrigerant R 600a is environmentally friendly but flammable. Escaping refrigerant may ignite.
- ▶ Do not damage the piping of the refrigeration circuit.

WARNING
Fire hazard and danger of damage!
- ▶ Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

WARNING
Blocked ventilation openings pose a risk of fire and damage!
- ▶ Always keep the ventilation openings clear. Always ensure that the appliance is properly ventilated!

- ▶ Detach the connecting cable from the rear of the appliance, removing the cable holder at the same time because otherwise there will be vibratory noise!

After installation:
- ▶ Remove the protective film from the decorative trims.
- ▶ Remove all transit supports.

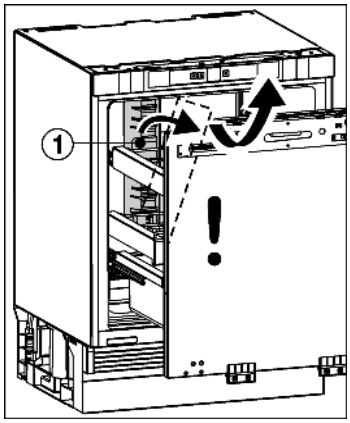


Fig. 3

- ▶ Swing the transport lock *Fig. 3 (1)* aside and draw it forwards for removal.
- ▶ Dispose of packaging material (see 4.5) .

Ventilation is effected by way of the plinth.

Note
- ▶ Clean the appliance (see 6.2) .

If the appliance is installed in a very damp environment, condensate may form on the outside of the appliance.
- ▶ Always see to good ventilation at the installation site.

4.3 Installation

All the assembly components accompany the appliance.

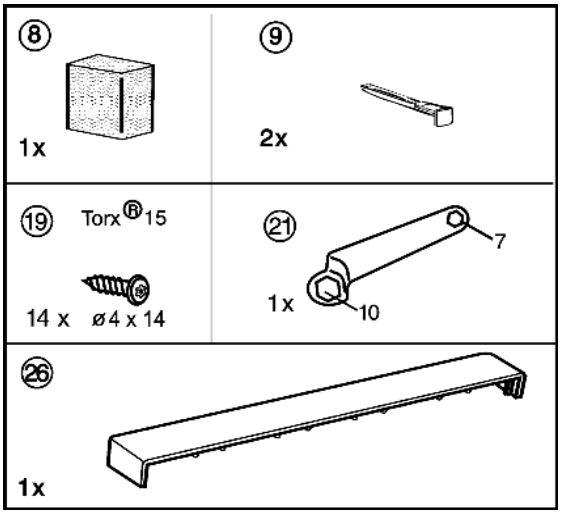


Fig. 4

Ensure that the following tools are to hand:
- ❑ Cordless screwdriver Torx® 15, 20, 25
- ❑ Spanner 13
- ❑ Screwdriver Torx® 15
- ❑ Flat-blade screwdriver 6
- ❑ Allen key 8

NOTICE
Risk of damage due to condensate!
- ▶ If refrigerator and freezer are installed side-by-side, the freezer always has to be sited to the right of the refrigerator (as seen from the front). Condensate is prevented from forming between the appliances by the foamed-in side wall heating on the left side of the freezer.

Pay attention that the socket is readily accessible.

Check installation dimensions:

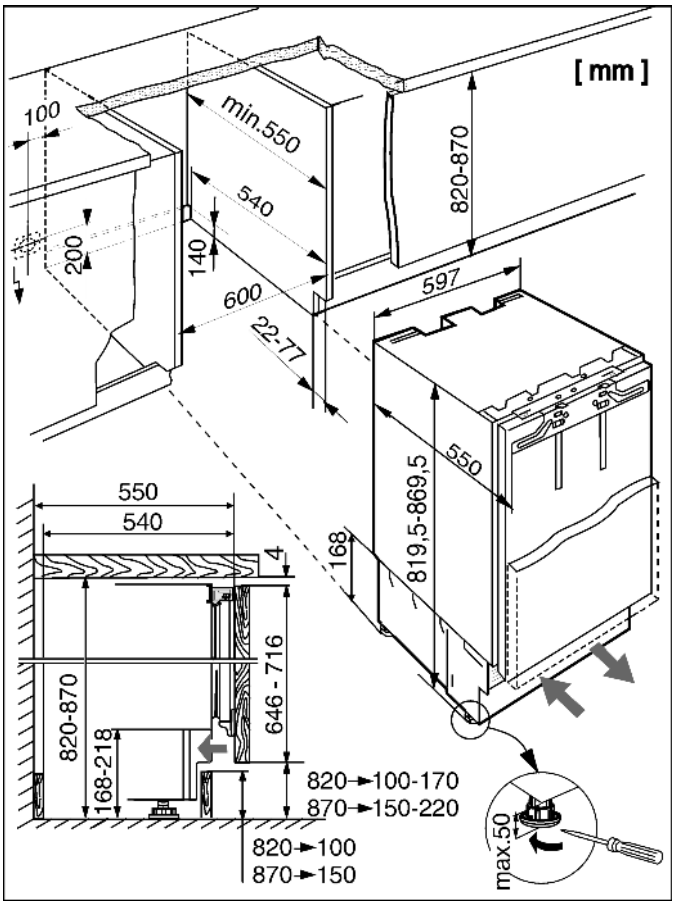


Fig. 5

Built-under variants:

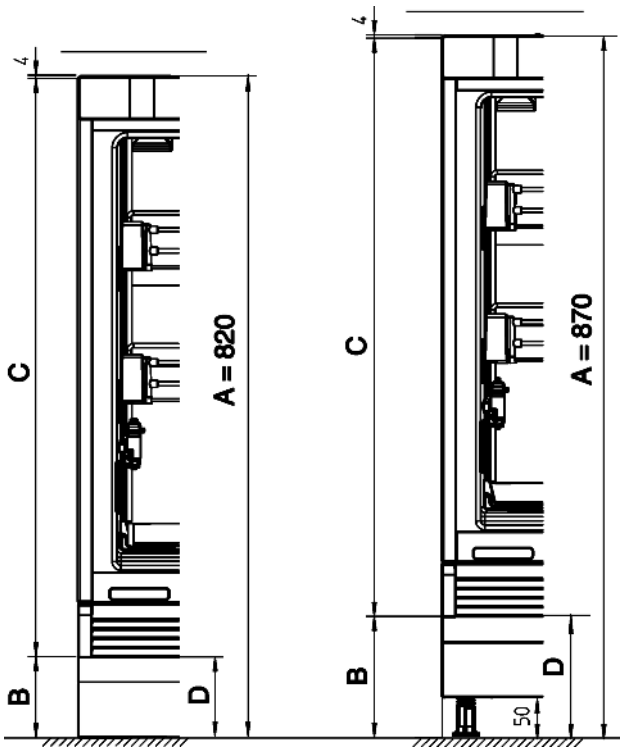


Fig. 6 for recess height 820 or 870 mm

A = Height of recess
B = Height of unit plinth
C = Height of unit door
D = Base height of cut-away unit plinth

Recess height A	Height of unit plinth B	Height of unit door C	Base height of unit plinth D
820 mm	100 mm	716 mm	100 mm
820 mm	170 mm	646 mm	100 mm
870 mm	150 mm	716 mm	150 mm
870 mm	220 mm	646 mm	150 mm

Note

- ▶ Before assembling the door of the unit, make sure that the admissable weight of the unit door is not exceeded.
- ▶ Otherwise damage to the telescopic rails and resultant malfunction cannot be ruled out.

Model	Max. weight of unit door
UIK	10 kg

4.3.1 Installing the appliance

- ▶ Detach the connecting cable from the rear of the appliance, removing the cable holder at the same time because otherwise there will be vibratory noise!
- ▶ Lay the connecting cable with the help of a string in such a way that the appliance can be easily connected after fitting.



Fig. 7

Slide in and align the appliance:

NOTICE

Risk of harm to flooring susceptible to damage!

- ▶ Place a strip of cardboard under the height-adjustable feet, approx. 10 cm x 60 cm, one at either side. Cut the strips out of the packaging. For opening heights less than 826 mm, use strips of a firm but thin material.
- ▶ After the appliance has been slid in, remove the strips.

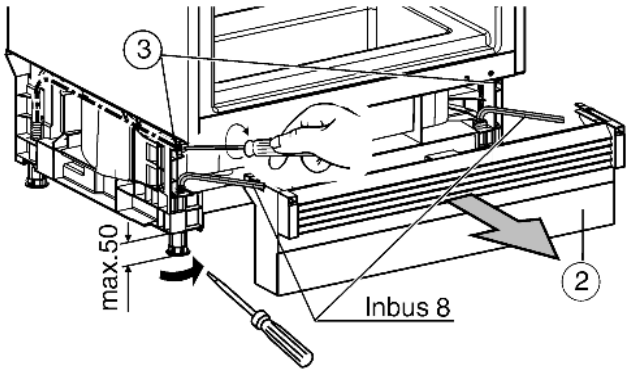


Fig. 8

- ▶ Pull the plinth panel forwards to remove it.
- ▶ Slide the appliance into the recess.
- ▷ The distance of the front edge of the side wall of the kitchen unit to the appliance body is 41.5 mm all the way round.

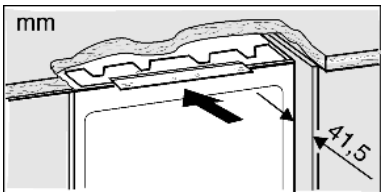


Fig. 9

For units with door stop components (knobs, sealing lips etc.):

- ▶ Deduct the extra dimension (depth of the door stop components) from the 41.5 mm depth of insertion.

▶ Align the appliance by adjusting the feet so that it stands straight: Extend the rear height-adjustable feet by turning the screws *Fig. 8 (3)*. If the front height-adjustable feet are extended, turn them using a screwdriver. If the front height-adjustable feet are retracted, then extend them using an 8 mm Allen key. The appliance should be slightly clamped in the recess, between floor and worktop!

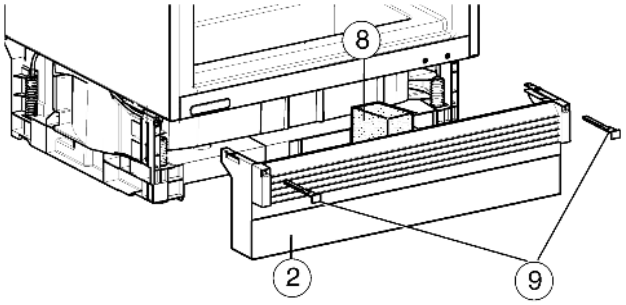


Fig. 10

▶ Insert foam element *Fig. 10 (8)* - functionally important for separate air currents!

▶ Re-attach the plinth panel *Fig. 10 (2)* and pull it forwards until the front edge of the ventilation grille and the unit plinth are planar!

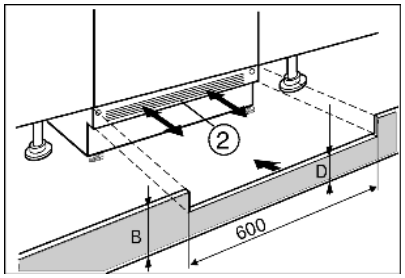


Fig. 11

▶ Pay attention that the ventilation slots are unobstructed: If necessary, cut away the unit plinth accordingly!

▶ To fix the plinth panel: Insert the bolts *Fig. 10 (9)*, while keeping firm hold of the plinth panel.

To secure appliance in the recess:

For installing the appliance under a granite worktop, a fastening set for lateral fixation is available from After Sales Service.

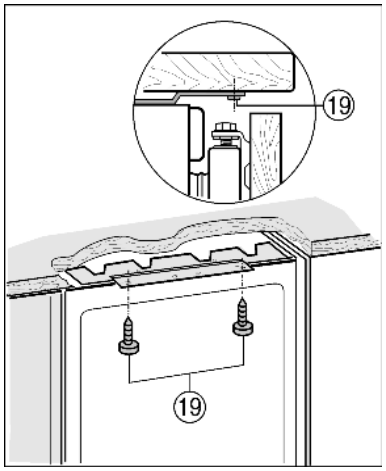


Fig. 12

▶ Secure the appliance at the top using long Spax screws *Fig. 12 (19)*.

4.3.2 Fitting the unit door

▶ Fit the handle on the unit door.

Note
To ensure uniform extension of the pull-out compartment:
▶ Always fit the unit door handle to the middle of the unit door.

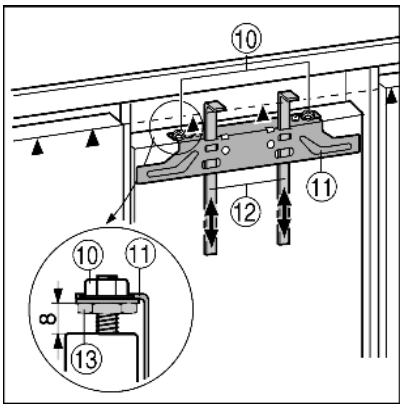


Fig. 13

▶ Check 8 mm presetting. (Distance between appliance door and lower edge of crosspiece)

▶ Push up assembly aids *Fig. 13 (12)* to unit door height. Lower edge ▲of the assembly aid = top edge of the unit door to be fitted.

▶ Unscrew fastening crosspiece *Fig. 13 (11)* by undoing the locknuts *Fig. 13 (10)*.

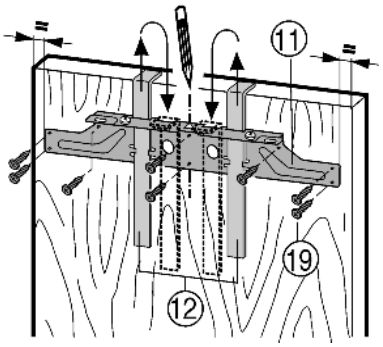


Fig. 14

▶ Attach fastening crosspiece *Fig. 14 (11)* to the inside of the unit door using the assembly aids *Fig. 14 (12)*.

▶ Centre fastening crosspiece *Fig. 14 (11)*: mark a short centre line on the unit door and place the tip of the cross-piece arrow over it.

▷ Distances to the outer edge are equal at the left and right.

For chipboard doors:

▶ Secure the fastening crosspiece *Fig. 14 (11)* with at least 6 screws *Fig. 14 (19)*.

For frame and panel doors:

▶ Secure the fastening crosspiece *Fig. 14 (11)*with 4 screws *Fig. 14 (19)* at the edge.

▶ Raise the assembly aids *Fig. 14 (12)* for removal, turn them and insert them into the adjacent openings.

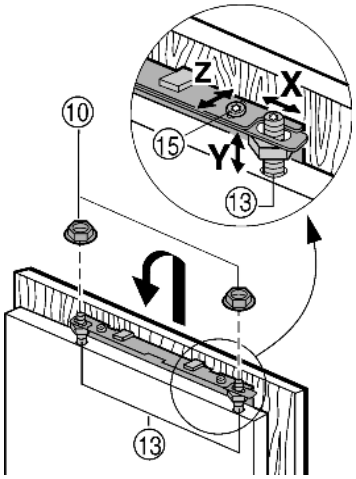


Fig. 15

▶ Attach the unit door to the adjusting bolts *Fig. 15 (13)* and loosely screw the locknuts *Fig. 15 (10)* onto them.

▶ Close the door.

- ▶ Check the gap between the door and the surrounding unit doors.
- ▶ To laterally align the door: push unit door in **X** direction.
- ▶ To align the door vertically **Y** and in the lateral inclination: adjust adjusting bolts *Fig. 15 (13)* with a screwdriver.
- ▷ The unit door is flush and in alignment with the surrounding unit fronts.
- ▶ Tighten locknuts *Fig. 15 (10)*.

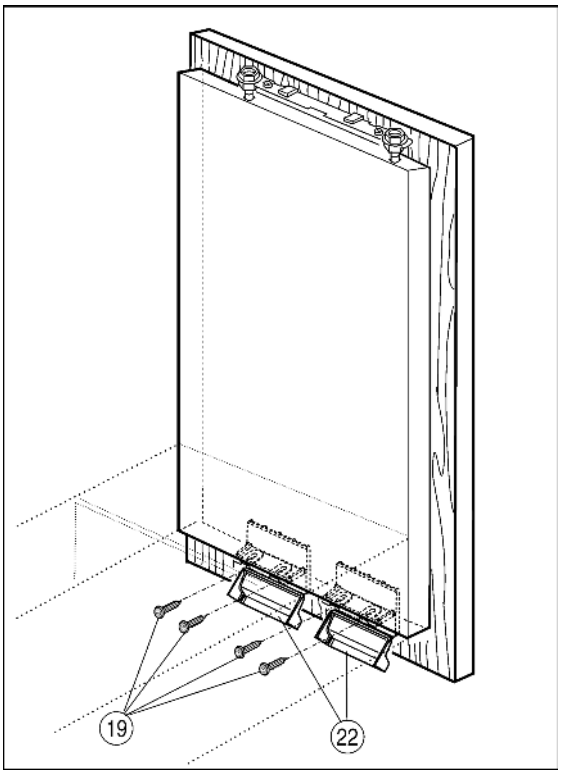


Fig. 16

- ▶ To screw the unit door to the appliance door: Fold down the flaps of the mounting brackets *Fig. 16 (22)*.
- ▶ Drill pilot holes in the door of the unit (possibly make preliminary holes with a bradawl).
- ▶ Screw the appliance door to the unit door with screws *Fig. 16 (19)* passed through the mounting brackets *Fig. 16 (22)*.

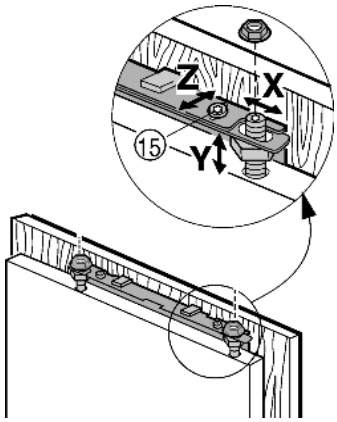
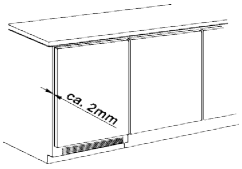


Fig. 17

- ▶ To adjust the depth of the unit door **(Z)**: Undo the screws *Fig. 17 (15)* at the top and screws *Fig. 18 (24)* at the bottom, then move the door.
- ▶ Do not allow knobs and sealing lips to make contact - important for function!
- ▶ Allow an air gap of 2 mm between the unit door and the body of the unit.



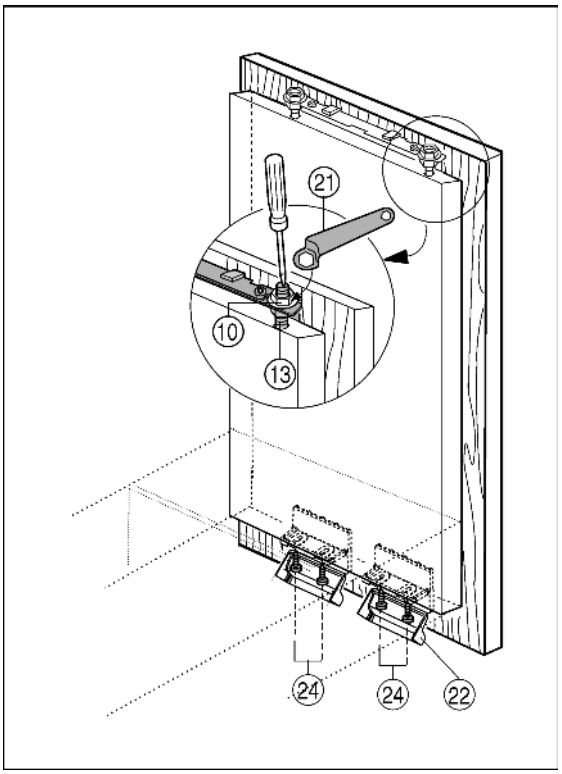


Fig. 18

- ▶ Check the fit of the door and readjust if necessary.
- ▶ Tighten all screws.
- ▶ Tighten the locknuts *Fig. 18 (10)* with the ring spanner *Fig. 18 (21)*, while holding the adjusting bolts *Fig. 18 (13)* with a screwdriver.
- ▶ Attach top cover *Fig. 19 (26)* and snap into place.

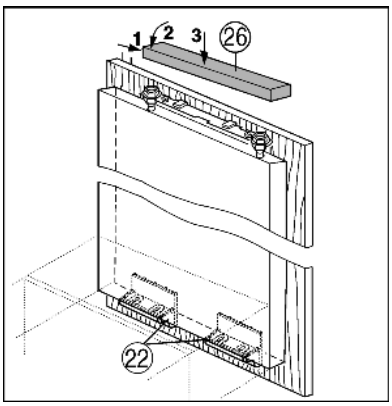


Fig. 19

- ▶ Close the mounting brackets *Fig. 19 (22)* again.

Check the following points to ensure the appliance is fitted properly. Failure to do so may lead to icing, condensate forming and malfunction:

- ▷ The door has to close properly
- ▷ The unit door must not butt against the unit body

4.4 Adjusting the contact of the door seal

It may be necessary to adjust the appliance door, depending on the weight of the kitchen unit door.

Once the kitchen unit door has been fitted, see that the door seal makes full contact with the appliance body.

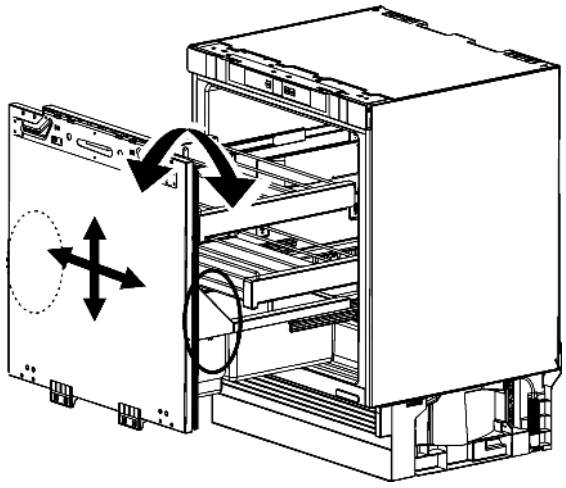


Fig. 20

The means for adjustment is situated on the right and left underneath the bottle rack on the door interior.

The setting as delivered is 0.

The following adjustments are possible:

- ❑ Inclination ± 1°
- ❑ Upward adjustment by 4 mm
- ❑ Downward adjustment by 2 mm
- ❑ Adjustment by 2 mm to the left and right, respectively

NOTICE

Functional impairment and risk of damage!

▶ Use the adjustment of the appliance door only for ensuring that the door seal of the pull-out compartment makes 100 percent contact with the appliance body. Do not use it for adjusting the kitchen unit door.

A check can be made on tight door closure by placing a shining electric torch inside.

4.4.1 Adjusting the door inclination

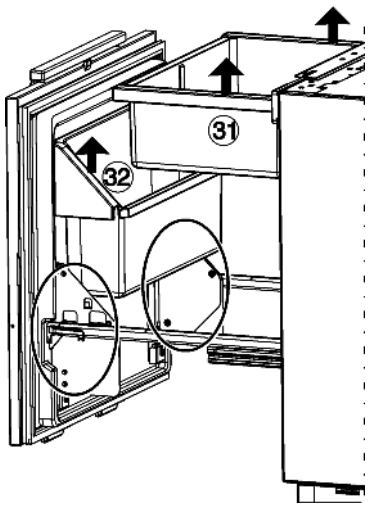


Fig. 21

Note

▶ Always make the adjustment on both sides, left and right!

▶ Lift off the vegetable bin *Fig. 21 (31)* and bottle rack *Fig. 21 (32)*.

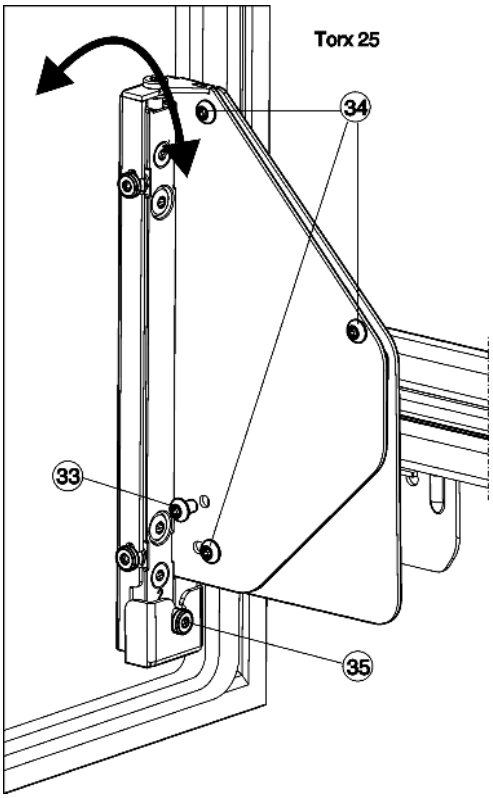


Fig. 22

▶ Unscrew and remove the screw *Fig. 22 (33)*.

▷ Dispose of the screw *Fig. 22 (33)*, it is no longer needed.

▶ Just loosen the screws *Fig. 22 (34)* by 1 to 2 turns.

▶ Turn the adjusting screw *Fig. 22 (35)*. Clockwise: for inclination of the door away from the appliance body at the top. Anticlockwise: for inclination of the door towards the appliance at the top and away from the appliance body at the bottom.

▶ After having adjusted the inclination, re-tighten all the screws *Fig. 22 (34)*.

4.4.2 Aligning the position of the door

Note

▶ Always make the adjustment on both sides, left and right!

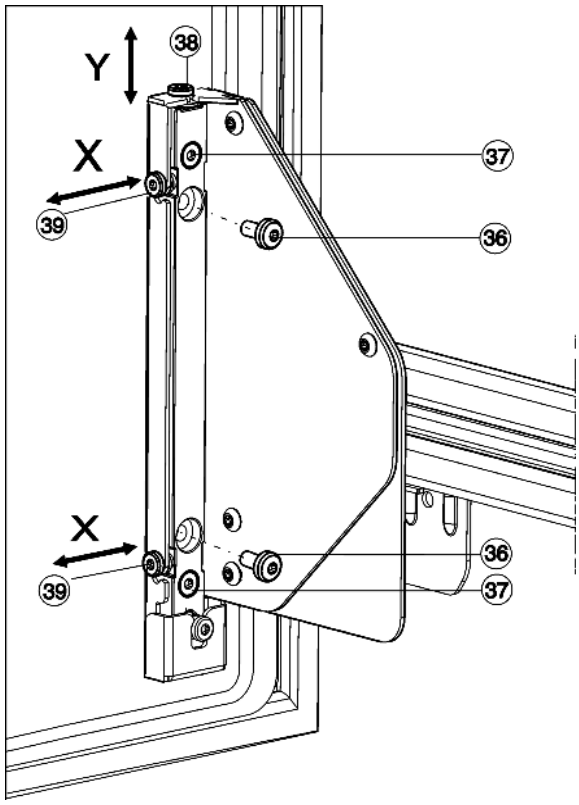


Fig. 23

Vertical adjustment, Y:

▶ Unscrew and remove the screws *Fig. 23 (36)*.
▷ Dispose of the screws *Fig. 23 (36)*, they are no longer needed.
▶ Just loosen the screws *Fig. 23 (37)* by 1 to 2 turns.
▶ Turn the adjusting screw (38). Clockwise: for moving the door upwards by 4 mm max. Anticlockwise: for moving the door downwards by 2 mm max.
▶ Re-tighten all the screws *Fig. 23 (37)*.

Lateral adjustment, X:

▶ If the screws *Fig. 23 (36)* are still present, unscrew and remove them.
▶ Just loosen the screws *Fig. 23 (37)* by 1 to 2 turns.
▶ Turn the adjusting screws *Fig. 23 (39)* according to the lateral adjusting direction wanted.
▶ After having made the lateral adjustment, re-tighten the screws *Fig. 23 (37)*.
▶ Re-insert the bottle rack *Fig. 21 (32)* and vegetable bin *Fig. 21 (31)*.

4.5 Disposing of packaging

WARNING
Danger of suffocation due to packing material and plastic film!
▶ Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*

▶ Take the packaging material to an official collecting point.

4.6 Connecting the appliance

NOTICE
Risk of damage to the electronic control system!
▶ Do not use stand-alone inverters (conversion of d.c. to a.c./ three-phase) or energy saving plugs.

WARNING
Fire and overheating hazard!
▶ Do not use extension cables or multiple socket outlets.

The type of current (alternating current) and voltage at the installation site have to conform with the data on the type plate (see Appliance at a glance).
Connect the appliance only with a properly installed socket outlet with earthing contact. The socket outlet must be fused with 10 A or higher.

It must be easily accessible so that the appliance can be quickly disconnected from the supply in an emergency. It must be outside the area of the rear of the appliance.

▶ Check the electrical connection.
▶ Plug in the power plug.

4.7 Switching on the appliance

▶ Press On/Off button *Fig. 2 (1)*.
▷ The appliance is switched on. The temperature display indicates the set temperature.

5 Control

5.1 Food refrigeration

Note
▶ The maximum weight you can store in the pull-out compartment with bottle rack and vegetable bin is 20 kg.

▶ Store readily perishable food such as pre-cooked meals, meat and sausage products in the middle area of the coldest zone. Store butter and preserves in the top area. (see Appliance at a glance)
▶ Use recyclable plastic, metal, aluminium and glass containers and cling film for wrapping.
▶ Do not store food too close together to enable good air circulation.

5.2 Setting the temperature

The temperature depends on the following factors:

- the door opening frequency
- the room temperature at the site where the appliance is installed
- the type, temperature and quantity of frozen food

Temperature setting to be recommended: 5 °C
▶ To access temperature adjustment: press the setting button *Fig. 2 (2)* once.
▷ The LED of the current temperature flashes in the temperature display.
▶ Press the setting button *Fig. 2 (2)* the number of times needed until the required temperature shines in the LED display.

Note
▶ Long pressing of the setting button sets a slightly colder value within a small temperature range (e.g.: between 5 °C and 7 °C). The LED of the next lower temperature range then shines in the temperature display.

5.3 SuperCool

With SuperCool you switch to the highest cooling performance to reach lower cooling temperatures. Use SuperCool, to rapidly cool large amounts of food.

When SuperCool is activated, the appliance operates with maximum cooling performance. The noise of the refrigeration unit may be temporarily louder as a result.

The SuperCool function uses slightly more energy.

5.3.1 Cooling with SuperCool

▶ Briefly press SuperCool button *Fig. 2 (4)*.
▷ The SuperCool button *Fig. 2 (4)* lights up.
▷ The cooling temperature drops to the coldest value. SuperCool is activated.
▷ SuperCool is automatically deactivated after 6 to12 hours The appliance continues to operate in the energy-saving, normal mode.

5.3.2 To prematurely deactivate SuperCool

▶ Briefly press SuperCool button *Fig. 2 (4)*.
▷ The SuperCool button *Fig. 2 (4)* goes out.
▷ SuperCool is deactivated.

5.4 Relocating the retainers

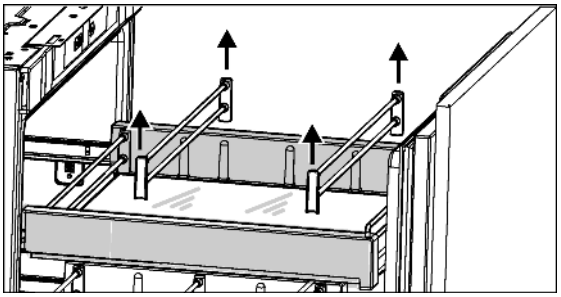


Fig. 24

▶ Take hold of the retainers at the right and left, carefully lift them out and press them into the new seats until the holders engage.

5.5 Partitioning the vegetable bin

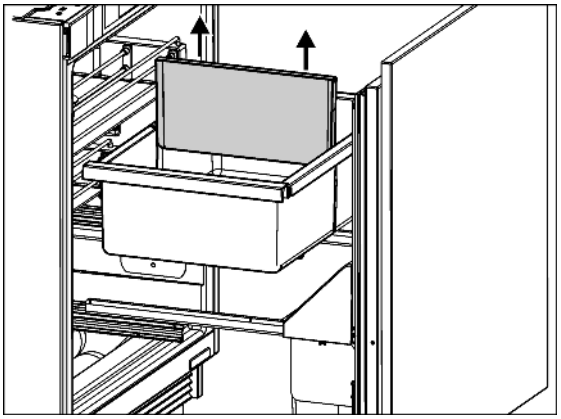


Fig. 25

▶ The partition can be used to subdivide the vegetable bin. Insert the partition at the guides or simply lift it out.

5.6 Storage in the recess at the base

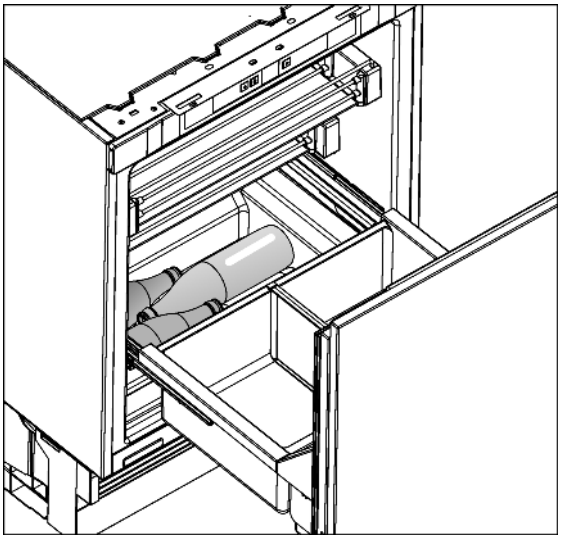


Fig. 26

▶ Unopened and tightly sealed bottles and packs can be stored in the storage recess at the base.

6 Maintenance

6.1 Defrosting

6.1.1 Defrosting refrigerator compartment

The refrigerator compartment is defrosted automatically. The water evaporates. Drops of water on the rear wall are functionally conditioned and perfectly normal.

▶ Clean the drain hole at regular intervals to allow the defrost water to drain (see 6.2) .

6.2 Cleaning the appliance

Before cleaning:

CAUTION
Risk of injury and damage as a result of hot steam!
Hot steam may damage the surfaces and cause burns.
▶ Do not use any steam cleaners!

NOTICE
Incorrect cleaning damages the appliance!
▶ Do not use cleaning agents in concentrated form.
▶ Do not use any scouring or abrasive sponges or steel wool.
▶ Do not use any cleaning agents containing sand, chloride, chemicals or acid.
▶ Do not use chemical solvents.
▶ Do not damage or remove the type plate on the inside of the appliance. It is important for the customer service.
▶ Do not pull off, bend or damage cables or other components.
▶ Do not allow any cleaning water to enter the drain channel, ventilation grille or electrical parts.


▶ Empty the appliance.
▶ Pull out the plug.
- Use soft cleaning cloths and a multi-purpose cleaning agent with neutral pH value.
- Only use food compatible cleaning and care agents on the inside of the appliance.

▶ Regularly clean ventilation grilles.
▷ Dust deposits increase energy consumption.

Interior:

Cleaning inner and outer plastic surfaces:

- ▶ Clean surfaces by hand with lukewarm water and a little washing-up liquid.
- ▶ To clean the drain opening: remove any deposits with a fine instrument, e.g. a cotton bud.

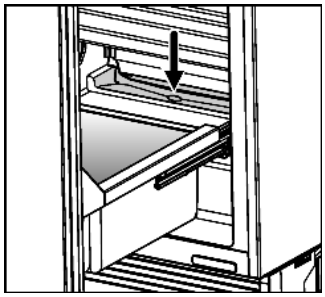

Items of equipment:

- ▶ Clean items of equipment by hand with lukewarm water and a little washing-up liquid.

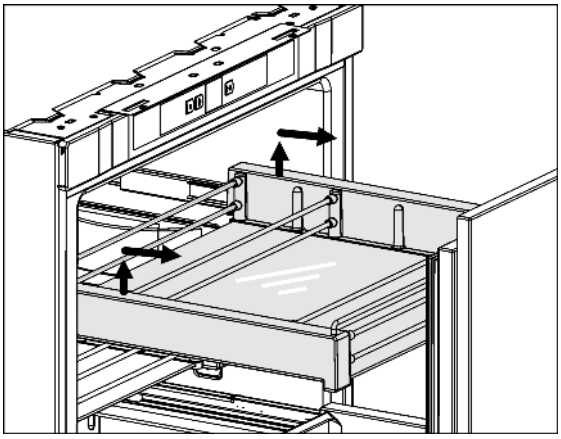


Fig. 27

- ▶ Removing the shelf: Lift the shelf at the back and draw it forwards, as illustrated.

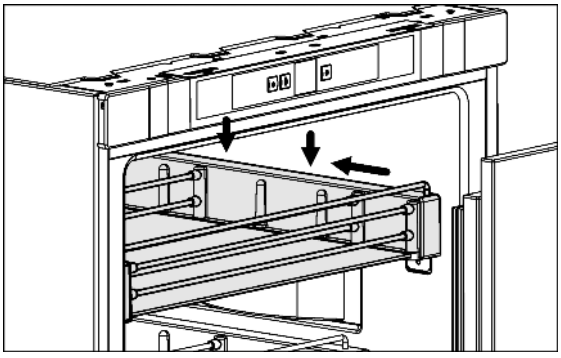



Fig. 28

- ▶ Inserting the shelf: Retract the telescopic rails.
- ▶ Place the shelf on the telescopic rails, push it to the back until it audibly engages.

Note

- ▶ If the shelf can no longer be extended as far as originally, then extend the telescopic rails all the way. The ball retainers of the telescopic rails are realigned in the process and maximum extension is restored.

- ▶ Clean the telescopic rails using a damp cloth only. The grease in the tracks is for lubrication purposes and must not be removed.

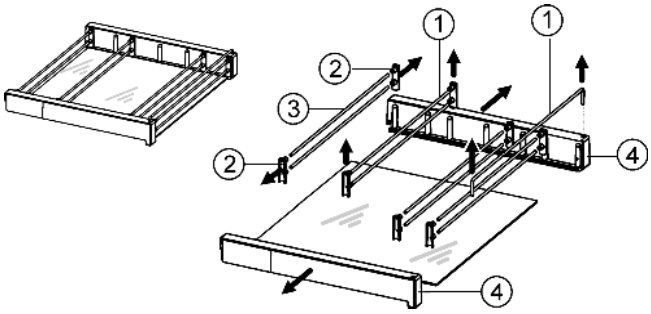

- ▶ Dismantling the shelves as illustrated: Lift off the retainers *Fig. 28 (1)*, strip the holders *Fig. 28 (2)* off the retainers *Fig. 28 (3)* and remove the side elements *Fig. 28 (4)* from the glass base.

After cleaning:

- ▶ Wipe dry the appliance and items of equipment.
- ▶ Connect the appliance and switch it on again.
- ▶ Put the food back inside.

6.3 Replacing the interior light*

Bulb data

- ❑ max. 25 W
- ❑ Bulb fitting: E14
- ❑ Current type and voltage must conform with the data on the type plate

- ▶ Switch off the appliance.
- ▶ Pull out the mains plug or switch off/unscrew the fuse.
- ▶ Take hold of the lamp cover at the top and bottom *Fig. 29 (1)*.
- ▶ Disengage the lamp cover at the back and detach it *Fig. 29 (2)*.
- ▶ Replace the bulb *Fig. 29 (3)*.

Apply slight pressure when turning the bulb to overcome the friction of the seal. Pay attention that the seal is seated properly in the lamp socket.

- ▶ Clip the back end of the cover in and clip the sides into place.

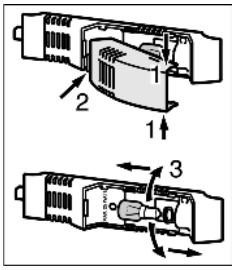


Fig. 29

6.4 Customer service

First check whether you can correct the fault yourself by reference to the list (see Malfunction). If this is not the case, please contact the customer service whose address is given in the enclosed customer service list.

WARNING

Risk of injury if repair work is not carried out professionally!

- ▶ Have any repairs and action - not expressly specified - on the appliance and mains cable carried out by service personnel only. (see Maintenance)

- ▶ Read the appliance designation *Fig. 30 (1)*, service No. *Fig. 30 (2)* and serial No. *Fig. 30 (3)* off the type plate located inside the appliance on the left-hand side.

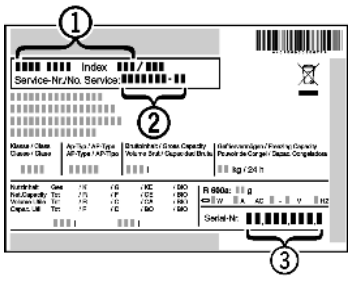


Fig. 30

▶ Notify the customer service, specifying the fault, appliance designation *Fig. 30 (1)*, service No. *Fig. 30 (2)* and serial No. *Fig. 30 (3)*.
▷ This will help us to provide you with a faster and more accurate service.
▶ Keep the appliance closed until the customer service arrives.
▷ The food will stay cool longer.
▶ Pull out the mains plug (not by pulling the connecting cable) or switch off the fuse.

7 Malfunction

Your appliance is designed and manufactured for a long life span and reliable operation. If a malfunction nonetheless occurs during operation, check whether it is due to a handling error. In this case you will have to be charged for the costs incurred, even during the warranty period. You may be able to rectify the following faults yourself:

Appliance does not work.
→ The appliance is not switched on.
▶ Switch on the appliance.
→ The power plug is not properly inserted in the wall socket.
▶ Check power plug.
→ The fuse of the wall socket is not in order.
▶ Check fuse.

The compressor runs for a long time.
→ SuperCool is activated.
▶ The compressor runs for longer in order to rapidly cool the food. This is normal.

The inverter regularly flashes every 15 seconds*.
→ The inverter is equipped with a diagnostic LED.
▶ The flashing is normal.

Excessive noise.
→ Speed-controlled* compressors may produce varying running noise due to different speed steps.
▶ The sound is normal.

A bubbling and gurgling noise.
→ This noise comes from the refrigerant flowing in the refrigeration circuit.
▶ The sound is normal.

A quiet clicking noise.
→ The noise is produced whenever the refrigeration unit (motor) automatically switches on or off.
▶ The sound is normal.

A hum. It is briefly a little louder when the refrigeration unit (the motor) switches on.
→ The refrigeration increases automatically when the SuperCool function is activated, fresh food has just been placed in the appliance or the door has been left open for a while.
▶ The sound is normal.
→ The ambient temperature is too high.
▶ Solution: (see 1.2)

Vibratory noise.
→ The appliance is not standing firmly on the floor. As a result, adjoining units or objects are set into vibration by the running refrigeration unit.
▶ Move the appliance away a little and align it using the adjustable feet.
▶ Move bottles and containers apart.

The temperature is not cold enough.
→ The door of the appliance is not properly closed.
▶ Close the door of the appliance.
→ Insufficient ventilation.
▶ Clear ventilation grilles.
→ The ambient temperature is too high.
▶ Solution: (see 1.2) .
→ The appliance was opened too frequently or for too long.
▶ Wait until the appliance reaches the required temperature itself. If not, contact the customer service. (see Maintenance).
→ The appliance is too close to a heat source.
▶ Solution: (see Putting into operation).
→ The appliance was not inserted properly into the recess.
▶ Check whether the appliance was inserted correctly and the door closes properly.

The interior light is not on.
→ The appliance is not switched on.
▶ Switch on the appliance.
→ The door was open longer than 15 min.
▶ The interior light automatically switches off if the door has been open for about 15 min.*
→ If the interior light is not on but the temperature display is lit, the bulb is faulty.*
▶ Change the bulb. (see Maintenance).*
→ The LED lighting is defective or the cover is damaged:*

WARNING*
Risk of injury due to electric shock!
Live parts are located under the cover.
▶ Have the LED interior light changed or repaired only by the customer service or by specialized personnel trained for the purpose.

WARNING*
Danger of injury due to laser radiation, class 1M.
▶ Do not look inside when the cover is open.

8 Decommissioning

8.1 Switching off the appliance

▶ Press On/Off button *Fig. 2 (1)* for about 2 seconds.
▷ The temperature display is dark.

8.2 Taking the appliance out of service

▶ Empty the appliance.
▶ Pull out the power plug.
▶ Clean the appliance (see 6.2) .



▶ Leave the door open to prevent odour.

9 Disposing of the appliance

The appliance contains some reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigeration circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.
▶ Disable the appliance.
▶ Pull out the plug.
▶ Cut through the connecting cable.