Instructions on mounting and use

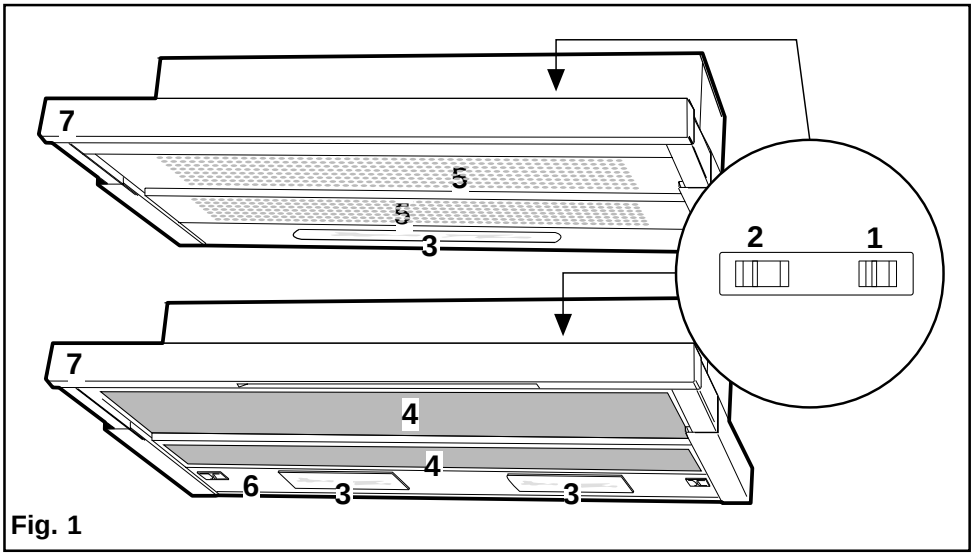


Fig. 1

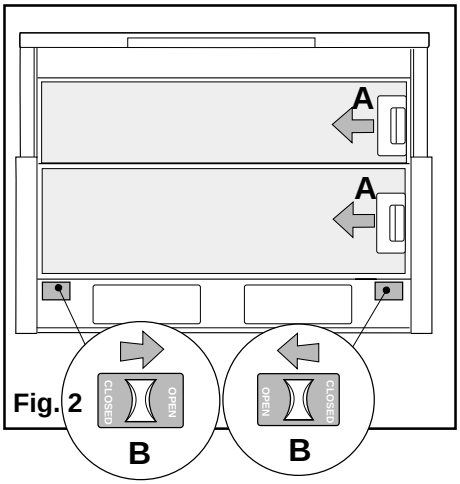


Fig. 2

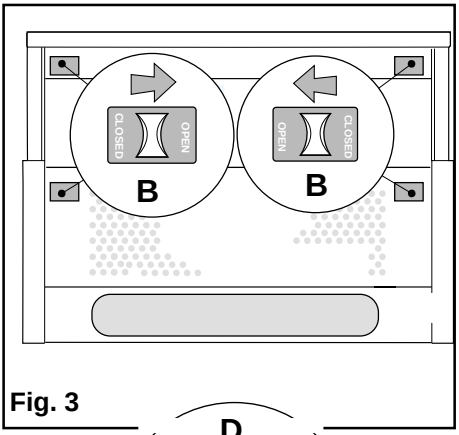


Fig. 3

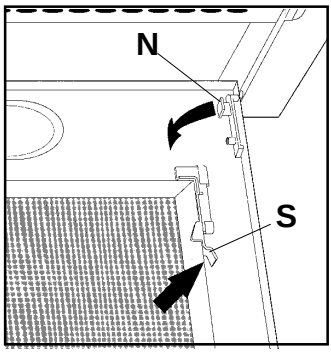


Fig. 4

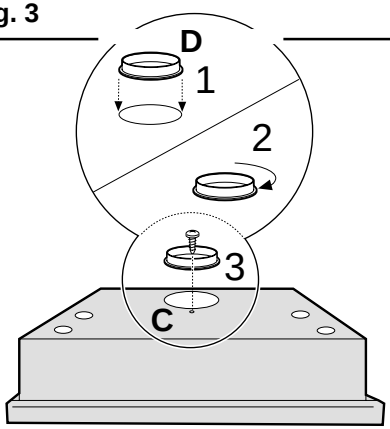


Fig. 5

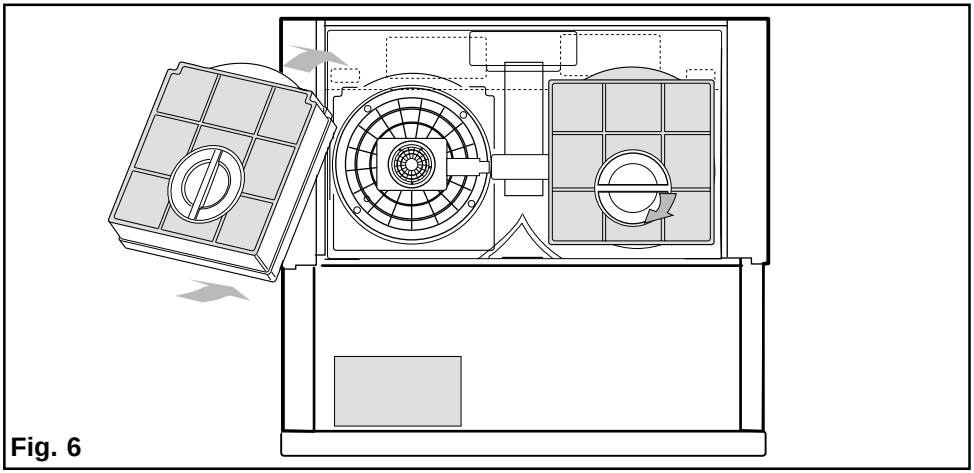


Fig. 6

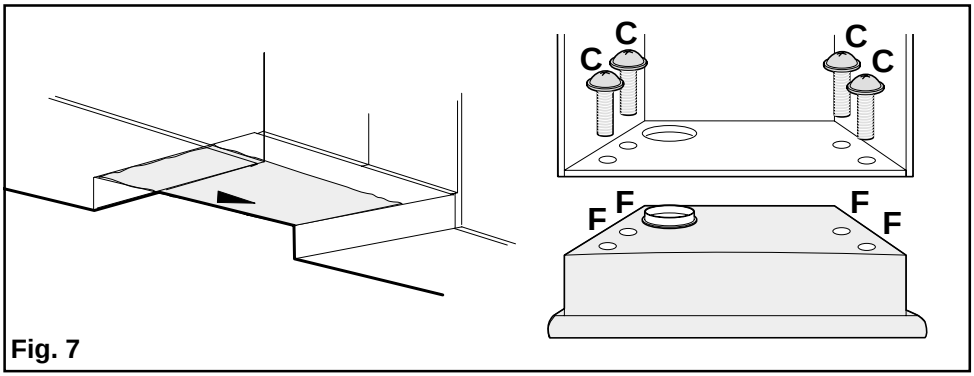


Fig. 7

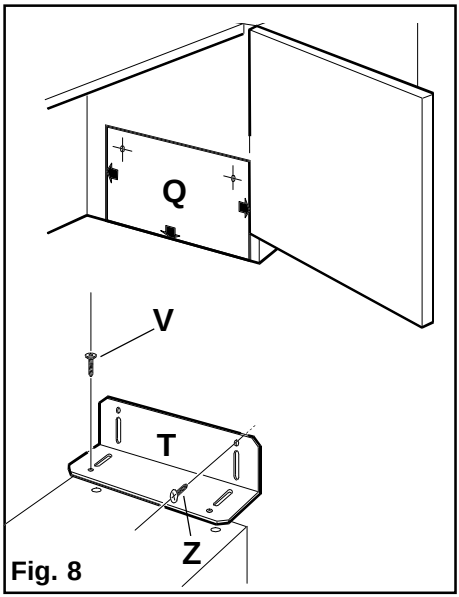


Fig. 8

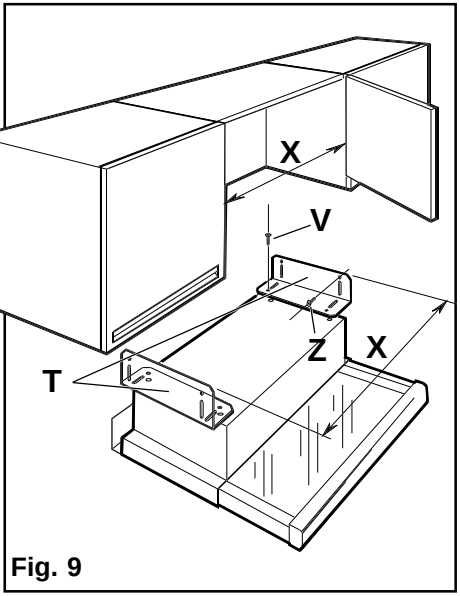


Fig. 9

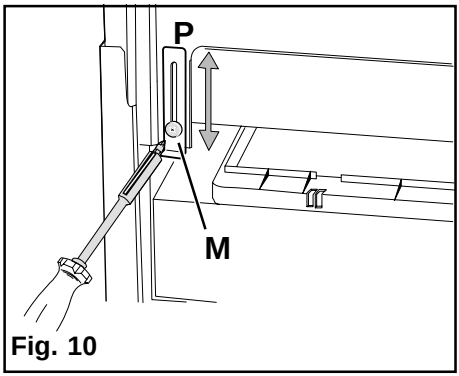


Fig. 10

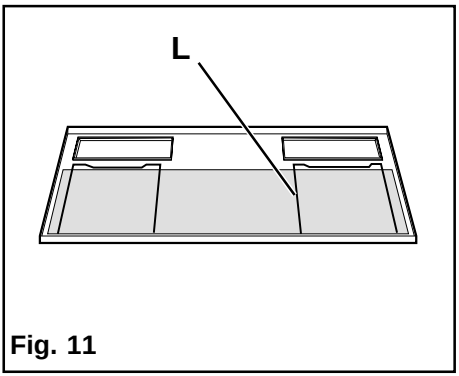


Fig. 11

Introduction to the Hood - Fig. 1

1. Light Switch
2. Motor Speed Switch
3. Light Covers - illumination of the Cooking Surface
4. Grease Filters
5. Grease Filter Support Grate (the grease filters are located within).
6. Light Cover Supports
7. Pull-Out Drawer

Model with Self-supporting Metal Filters

Removing the Grease Filters - Fig. 2

a. Remove the pull-out drawer completely.
b. Press the side handles (**A**) towards the opposite side and remove the filters.

Putting the Filters Back in Place

a. Remove the pull-out drawer completely and mount the grease filter so that it covers the drawer.
b. Close the drawer and install the remaining grease filter.

Opening the Light Cover Support

a. Remove the pull-out drawer completely.
b. Push the **B** knobs inwards toward each other (in the "Open" direction as indicated on the plastic knob itself).

Model with Grease Filter Support Grate

Opening the Grease Filter Support Grates - Fig. 3

a. Remove the pull-out drawer completely.
b. Push the **B** knobs inwards toward each other (in the "Open" direction as indicated on the plastic knob itself).
c. To remove the grates completely, use the **N** spring fasteners, which act as pins to hold the grate in place (Fig. 4).

Systems Available

Two systems are available:

Venting Outdoors

The air is vented outdoors through a duct which must be connected to the exhaust opening (**C** - Fig. 5) by means of the flange (**D**). The diameter of the exhaust duct must be exactly the same as that of the flange.

Air Recirculation

— The air is cleaned by means of charcoal filters (one or two depending on the model) and then circulated back into the room.
— The use of a charcoal filter is necessary when the hood cannot vented outdoors either because ducting is not available or cannot be installed.
— The filtered air is returned from atop the cabinet through a duct that passes through the cabinet itself.The diameter of the duct must be the same as that of flange **D** (Fig. 5).

The installion (or removal) steps are identical for hoods with either 1 or 2 motors:

a. Request a charcoal filter from the retailer, specifying the model and type of hood (1 filter for a hood with one motor and 2 filters for a hood with 2 motors).

Caution! Some charcoal filters come covered with a plastic film to protect their filtering properties. If this is the case, remove the film before installing the filter.

b. Remove the pull-out drawer completely.
c. Remove the grease filters or the grates.
d. Open the light cover support.
e. Install the charcoal filter so that it covers the plastic grate which protects the ventilation fan (Fig. 6).
f. Turn the center handle in the clockwise direction until it locks in place.
g. Remount the grease filters and the grates.

Installation

When installed, the distance between the hood and burners must be not less than 65 cm for electric burners or 70 cm for gas or mixed-fuel burners.

Do not tile, grout or silicone this appliance to the wall. Surface mounting only.

Do not fix chimney flue to furniture or fly over shelves unless the chimney flue can be easily removed, in case maintenance is ever required.

Warning!

— The hood cannot be connected to the flues of other appliances that run on energy sources other than electricity.
— When the hood is used at the same time as other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
— No food must be cooked flambé underneath the hood. The use of an unprotected flame is dangerous for the filters and could cause fires.
Therefore, never use an open flame under the hood. When frying foods, never leave the pan unattended because the cooking oil could flare up.
— Please comply with the provisions set forth by current regulations regarding the ventilation of hoods.
— The manufacturers will not be held liable for damage to the hood or fires due to the failure to observe the above instructions.

Electric connection

Before completing any connections, make sure the house voltage corresponds with the voltage indicated on the data plate affixed to the inside of the hood.
It is advisable to call a qualified technician to make the electrical connection.

Hood Fitted with Plug

Insert the plug into a socket which complies with current regulations.
If you intend to connect the hood directly to the mains, remove the plug and fit an approved bipolar switch with a minimum contact opening of no less than 3mm.
If the plug is not accessible once it has been inserted in the socket, it will, however, be necessary to fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

Appliance without Plug

Fit an approved plug or an approved bipolar switch with a minimum contact opening of 3mm.
The manufacturers will not be held liable for any problems caused by the user's failure to observer the above instructions.

Mounting the Hood

The diameter of the ventilation duct must be the same as the that of the flange mounted on the ventilation hole on the hood. The horizontal sections of the ducting must be installed at a slight angle (about 10%) to facilitate venting the vapours and fumes outdoors.
To mount the hood proceed as follows:

a. Drill holes in the bottom of the cabinet so that they correspond with the holes (**F**) in the hood used to fasten it to the cabinet. Use the drilling template if it has been provided (the edge with the arrow should correspond with the back edge of the cabinet - Fig. 7).
b. Drill a hole on the back and in the top of the cabinet for the ventilation duct (a good rule of thumb is to make the diameter of the hole 15 mm larger than that of the duct used).
c. Insert the **C** screws supplied with the hood into the **F** holes and tighten the hood to the cabinet (Fig. 7).

Assembly using side brackets (if supplied)

The hood can also be mounted by means of two brackets supplied with the hood.
To fix the hood in this way (Fig. 8-9), proceed as follows:

a. Drill two holes Ø 2 mm on the two sides of the cupboard from the inside using the template **Q** supplied.
b. Fix the two brackets **T** to the upper side of the hood using screws **V** 4,2 x 35 (the position of the brackets can be adjusted in width according to the thickness of the cupboard panels).
c. Fix the hood, through the brackets already mounted, on the inside of the cupboard using screws **Z** 3,5 x 13 (two each side).

Adjusting the Pull-Out Drawer

The hood can be installed beneath cabinets with varying depths. Adjustments for opening and closing the drawer can be made based on your specific needs.